



**16"(40.6 cm)2-in-1 PEDESTAL/TABLE FAN
WITH REMOTE CONTROL**

**MODEL:LDS16-40AD-RC
OWNER'S MANUAL**

NOTE: FOR HOUSEHOLD USE ONLY.NOT INTENDED FOR COMMERCIAL USE.

IMPORTANT INSTRUCTIONS

RULES FOR SAFE OPERATION

Please read and understand all instructions before using this fan.

 
When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons or property, including the following:

1. Never insert foreign objects such as fingers, pencils, etc., through the grille when fan is running.
2. Disconnect fan from electrical outlet when moving from one location to another, when removing grilles or for cleaning.
3. Be sure the fan is on a stable, even surface when operating to avoid overturning.
4. DO NOT use fan in window. Rain may create an electrical hazard. Do not leave the fan operating adjacent to an area where water has collect to avoid the potential of electrical hazard. Do not immerse unit, plug or cord in water or spray with liquids.
5. This appliance has a three-prong cord. To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If it does not fit, contact a qualified electrician. Do not attempt to override this safety feature.
6. Do not leave the appliance running or operable in a place where young children or animals could have access to it without supervision. Do not allow cord to hang down from table or counter.
7. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner, contact a qualified electrician should this happen. NOTE: Repairs made by unqualified electricians will void this product's warranty.
8. Do not operate in the presence of explosive and/or flammable fumes.
9. Do not place fan or any parts near an open flame, cooking or other heating appliance.
10. Do not use this fan outdoors or where there are bodies of water such as the bathroom or laundry room.
11. Do not use fan without its base. The fan must operate standing upright.
12. Do not use fan near curtains, plants, window treatments, or where other objects can become caught in the blades.
13. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
14. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
15. Use this fan only as it is described in this manual.


NOTE: There are no serviceable parts in this unit. Do not attempt to disassemble.

WARNING: To reduce risk of fire or electrical shock, do not use this fan with any solid-state speed control devices.

PARTS OF THE FAN(FOR STAND USE)

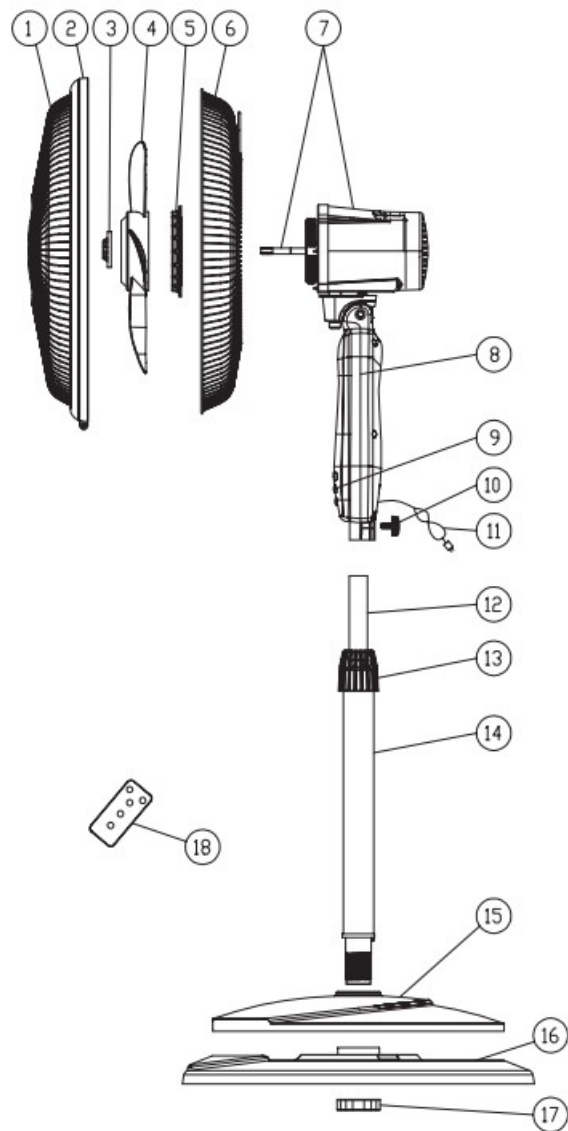


PARTS OF THE FAN(FOR TABLEUSE)

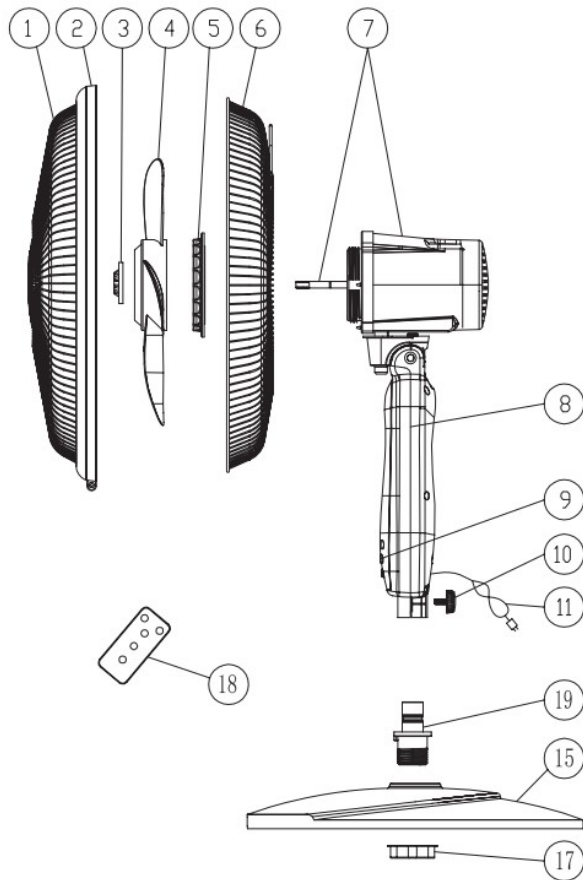 

1. Front grille	9. Control panel	17. Plastic base locking nut
2. Grille band	10. Upper column knob	18. Remote control
3. Spinner	11. Power cord	19. Connecting adapter(for table use)
4. Fan blade	12. Adjustable column(for stand fan)	
5. Plastic nut	13. Height adjustment locking Nut(fan stand fan)	
6. Rear grille with handle	14. Lower column(for stand fan)	
7. Motor shaft and housing	15. Inner base	
8. Upper column	16. Outer base	

ASSEMBLY

 - Base (Parts#8,#10,#12-17,#19)

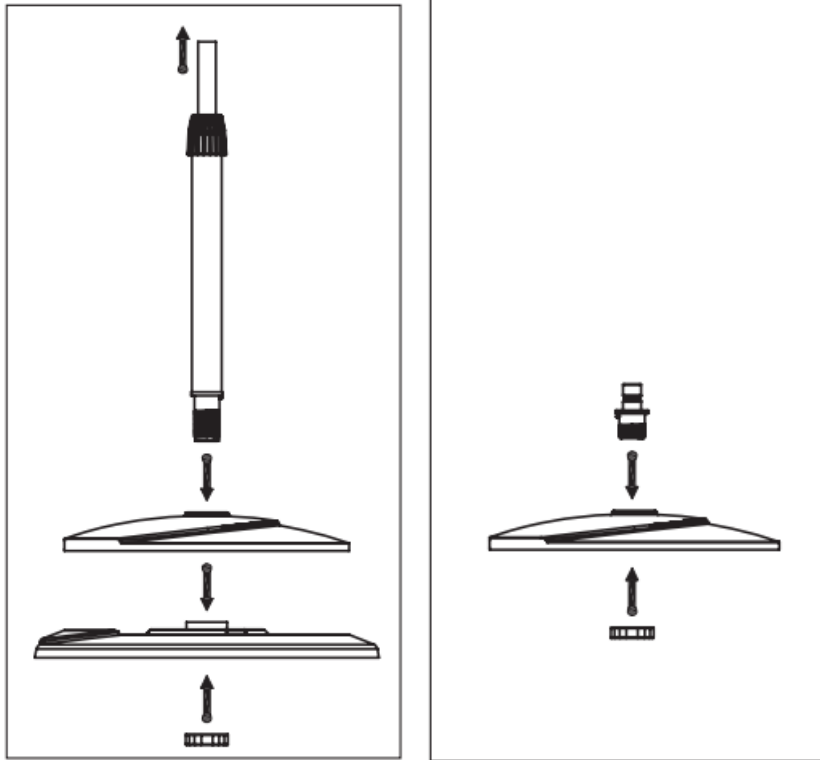

Stand fan

Table fan

Stand fan

1.Remove parts from packaging.Set the fan outer base(#16)on the floor,put the inner base(#15)on and align the circle curves on both bases.Insert lower column(#14)into the bases and secure them with the plastic base locking nut(#17).

2.Loosen the height adjustment locking nut(#13)and pull up the adjustable column(#12);hold desired height by re-tightening the height adjustment locking nut(#13).


3.Place the upper column(#8)on top of the adjustable column(#12).Tighten the upper column knob(#10).

Table fan

1.Set the fan inner base(#15)on the table,insert the connecting adapter(#19)into the base and secure them with the plastic base locking nut(#17).

2.Place the upper column(#8)on top of the connecting adapter(#19).Tighten the upper column knob(#10).

 -Blades and grills

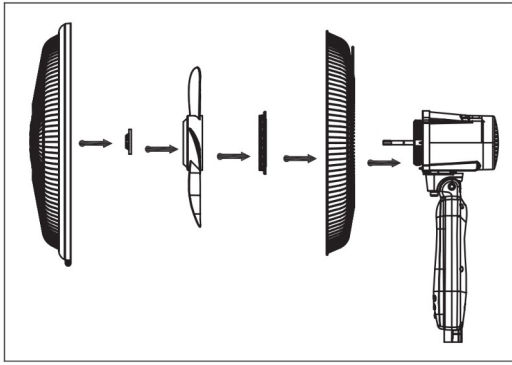

- 1.Remove and discard the plastic sleeve on the motor shaft(#7).Position the rear grille(#6)against the front of the motor housing through the motor shaft(#7).Ensure the handle at the back of grille(#6)is facing up and that all guiding pegs on the motor housing are lined up with cutouts on the rear grille(#6).
- 2.Secure the rear grille(#6)into place with the plastic nut(#5).Fasten the plastic nut(#5)firmly onto the motor housing (#7)by tightening it in a CLOCKWISE direction.
- 3.Install the fan blade(#4)onto the motor shaft(#7)with the cutouts fitted.Place spinner(#3)on the motor shaft(#7)after the blade(#4).Fasten into place by tightening the spinner(#3)in a COUNTER-CLOCKWISE direction.
- 4.Fit front grille(#1)with grille band(#2)against rear grille(#6)and close them together by fastening the screw at the bottom of grille band(#2).

Operating

Plug fan into a 230V/50Hz outlet and follow the operating instructions:

USING THE CONTROL PANEL AND REMOTE CONTROL

This fan is equipped with 3 speeds,3 breeze modes,a timer and remote.For your convenience,the buttons on the control panel of the fan operates the same functions as the remote control.

BUTTON	FUNCTION	DISPLAYED
 TIMER	Pressing this button sets the timer in increments of 0.5hours to a maximum of 7.5hours.After the timer runs out,the fan will automatically shut off.	0.5H,1H,2H,4H. Example 1:0.5H illuminated indicates the timer will shut off after 30minutes. Example 2:0.5H and 2H illuminated indicates the timer will shut off after 2.5 hours. Example 3: 0.5H,1H,2H and 4H illuminated indicates the timer will shut off after 7.5h.
 MODE	Pressing this button will cycle the fan through Different patterns of breeze modes.	 The light at this icon indicates the fan simulating a NATURAL breeze mode by cycling through all the speeds.

		 The light at this icon indicates the fan is simulating a softer breeze mode (SLEEP MODE) by cycling one speed higher and lower, ideal for resting.  and  lights are OFF If both of the above lights are not illuminated the fan is operating on the NORMAL mode.
 SPEED	Pressing this button will cycle the fan through 3 comfort speeds (High/Medium/Low). This button can be used with any MODE.	   These icons indicate the selected speed low, medium, high.
 OSCILLATION	To activate the oscillation function for widespread breeze distribution, press this oscillation button once.	The oscillation light on the fan will be illuminated when activated. Press button again to turn off the oscillation function. Oscillation can be controlled while the fan is operating
 ON/OFF	Use this button to turn the fan ON and OFF.	

USING THE REMOTE CONTROL

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION OF THE DEVICE.



This fan includes a full function remote control. Follow the operations in "USING THE CONTROL PANEL".

Guidelines for using the remote control (one CR2025 battery included):

Note: Pull the insulation film out from the backside of the remote control before use it.

- The remote control must be pointed towards the receiver on the fan in order to work.
- The range for the remote control is 5 metres.If the remote control is not pointed towards the receiver,the range will be decreased.
- The remote control may not operate in a room where heavy machine is operating.
- Do not block the line of sight between the remote control and the receiver.
- Handle the remote control with care.Do not drop the remote control on the floor or bang it against hard objects.

Guidelines for use of batteries

- If the remote control will not be used for a long period of time,remove the batteries from the battery compartment.
- The remote control uses one CR2025 battery.
- Clean battery contacts and also those of the device prior to battery installation
- Ensure the batteries are installed correctly with regard to polarity matching +/-sides of the battery to corresponding indications on the remote control.
- Remove used and dead/discharged batteries promptly.

IMPROVED AIR CIRCULATION

This fan has 3 functions which will allow you to better customize your preferred air comfort as well as improve air circulation in the room:

A.OSCILLATION:

To activate the oscillation function for widespread breeze distribution,press the  button.To turn off the oscillation function for a targeted breeze setting,press again.Controlling the oscillation can be done while the fan is operating.

B.TILT:

To tilt the fan head so that the breeze is targeted at an angle,steady the motor housing of the fan with one hand and grip the fan grille with another.Carefully tilt the head of the fan as depicted in until it reaches the desired angle.Be careful as to not tilt the head back further than it is intended to go,doing so will damage the unit.

NOTE:The fan must be turned off when performing this adjustment.

C. HEIGHT ADJUSTMENT:

To adjust the height of the fan,grip between the upper column(#8)/adjustable column(#12)and loosen the height adjustment locking nut(#13).Extend or lower the adjustable column to increase or decrease the height of the fan.Once the fan is at a comfortable height,tighten the height adjustment locking nut(#13).NOTE:The fan must be turned off when performing this adjustment.

Specifications

Model	LDS16-40AD-RC
Voltage	220-240V 50Hz
Wattage	55W

CLEANING&MAINTENANCE

- 1.Always disconnect the cord from the electrical outlet when cleaning your fan.
- 2.Light accumulated dust may be removed by using a soft cloth to wipe away the dust at the back grille of the fan.
- 3.Wipe the exterior surfaces of the fan occasionally with a damp cloth(not dripping wet)and dry thoroughly with a soft dry cloth before operating the fan.
- 4.Do not use harsh cleaners or materials to clean this unit,doing so will cause damages to it.

CAUTION:DO NOT ALLOW WATER TO RUN INTO THE INTERIOR OF THE FAN AS THIS COULD CREATE AFIREOR ELECTRIC SHOCK HAZARD.THE FAN MOTORIS FACTORY LUBRICATED FOR LIFE AND WILL REQUIRE NOFURTHER LUBRICATION.NO OTHER USER MAINTENANCE IS REQUIRED OR RECOMMENDED.

STORAGE

- 1.Follow cleaning instructions 1 to 4 above.Make sure to disassemble and clean fan before storing.
- 2.Retain the original packaging to store your fan.
- 3.Always store in a dry place.
- 4.Never store while still plugged in.
- 5.Never wrap cord tightly around the fan or put any stress on the cord where it enters the fan as it could cause the cordto fray or break.

TROUBLESHOOTING

If your fan fails to operate,please follow these procedures prior to contacting customer service:

PROBLEM	PROBLEM CAUSE	SOLUTON
	Fan is not plugged into a 230V AC,50Hz polarized outlet/receptacle.	Plug in unit and attempt to turn on again.
	Breaker has tripped or fuse has been blown.	Please check your electrical box to confirm the breaker has not been tripped and the fuse has not been blown. Plug in unit and attempt to turn on again. Attempt to plug unit in another receptacle in the house.
The fan was working,but suddenly turned off.	The timer setting has counted down to automatic shut off.	Ensure all the timer lights on the control panel 0.5H,1H,2H,4H are off.If any of

		them are lit,continue to press the timer button  until all the timer lights are off.For more information see "OPERATINGINSTRUCTIONS"section for the TIMER
Oscillation function is not working.	The oscillation function has not been activated. 	Ensure the  indicator is lit.If it is not,press the button to start the oscillation function.This can be done while the fan is operating.
Fan is on but air coming out of it is not strong enough.	There is dust built up at the back of the fan.	Turn fan OFF and unplug.Using a soft,dry cloth,wipe the back of the grille to remove any dust build-up.Plug in unit and turn fan back ON to resume normal operation.
The remote control is not working.	The batteries are weak.	Refer to OPERATING INSTRUCTIONS regarding the remote control on page 6.Guidelines for using the remote control(2L1131 or LR54 micro alkaline batteries included)and Guidelines for use of batteries.
	The remote control is too far from the main fan.	
	The remote control is not sending a signal to the main fan.	

PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE FAN YOURSELF.DOING so COULD VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY.

Wifi function

Note:

This app is only supported by 2.4Hz WiFi network.Please make sure that your phone is connected to a 2.4Hz WiFi network.

Step 1:Download the app

Search and download the,Tuya Smart"from the store.

 
Step 2:Registration

Open the app and register according to the instructions.

Step 3:Connect the app to the fan

Insert the plug of the fan into a 220-240V socket.The fan is now in standby mode.

Press „Add Device"or,+"in the upper right corner on the home page of the app.Press,Home Appliance"and press „Fan“.

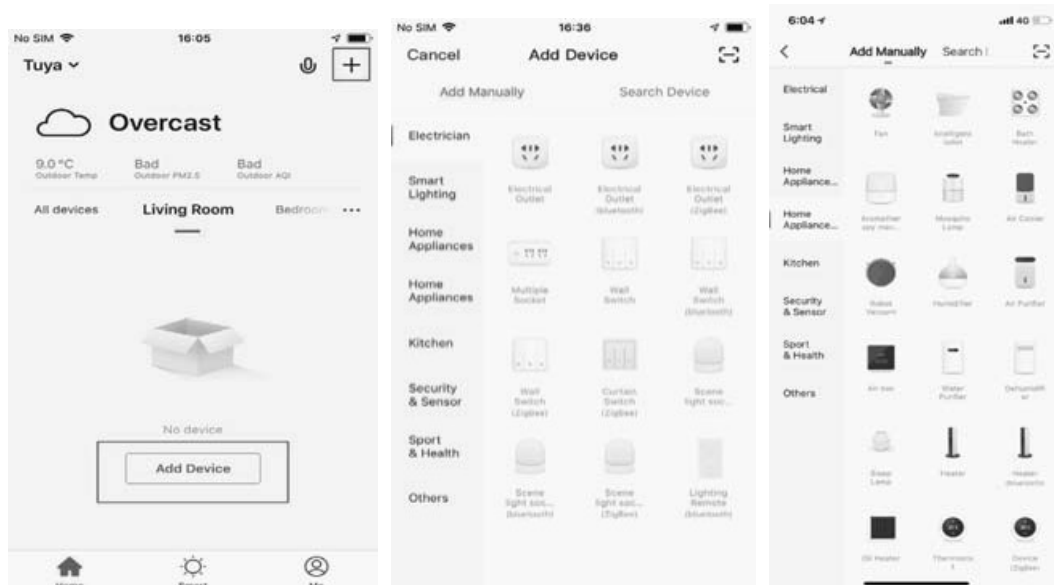


4. Press the OSC button on the fan control panel for 5 seconds. The WiFi indicator on the display starts flashing rapidly.

Press 'Confirm indicator rapidly blink' on the mobile phone as shown in the following picture.

Note:

 If the connection fails, press 'App Mode' (top right) and 'Confirm indicator slowly blink' on the mobile phone.

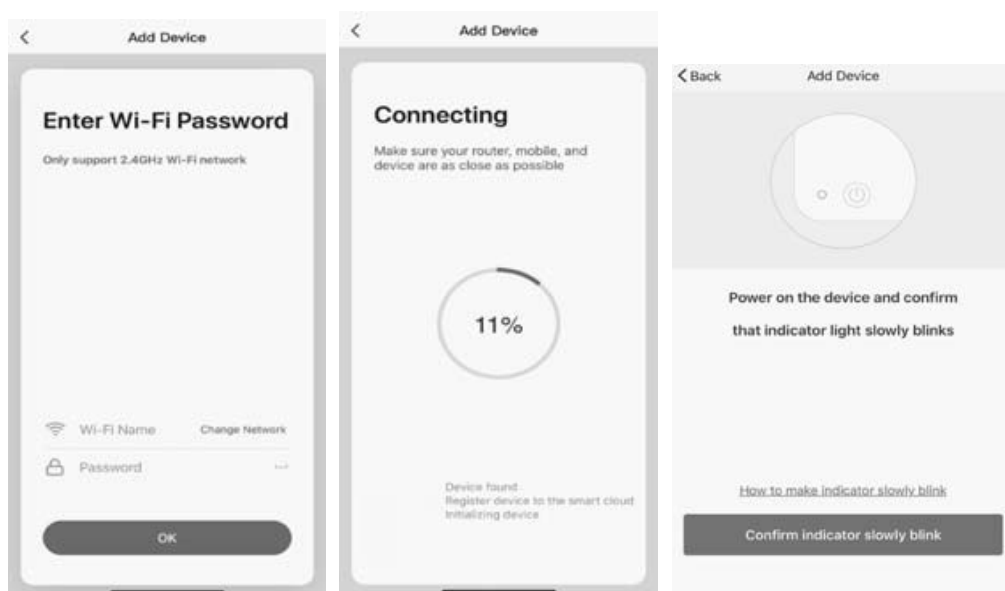

5. If your mobile phone displays a connection and the WiFi indicator on the fan stops glowing, the app is connected to the fan.

If the connection is successful, you can control the fan with the app.



AMAZON ALEXA

- 1.If you want to use Alexa,press ,ME"(bottom right).
- 2.Select,"more services"and then ,Alexa".
- 3.There you will find how to use Alexa.
- 4.To switch the fan ON/OFF,use the voice command:
- 5.Alexa turns the fan ON/OFF."

