



7000 BTU mobiele airconditioner

MODEL: KH-AC-7000

Gebruiksaanwijzing

VEILIGHEIDSVOORSCHRIFTEN

Lees de handleiding zorgvuldig door voordat u het apparaat in gebruik neemt. Dit apparaat is uitsluitend bestemd voor gebruik binnenshuis en in een huishoudelijke omgeving. Elk ander gebruik wordt door de fabrikant afgeraden en kan leiden tot brand, elektrische schokken of ander letsel bij de gebruiker of schade aan eigendommen, en kan tot het vervallen van de garantie leiden. De installatie moet gebeuren volgens de voorschriften van het land waar het apparaat wordt gebruikt. Haal de stekker uit het stopcontact voordat je het apparaat uit elkaar haalt, in elkaar zet of schoonmaakt. Raak geen bewegende onderdelen van het apparaat aan. Steek nooit vingers, pennen of andere voorwerpen door de beschermkap.

Laat kinderen niet zonder toezicht met dit apparaat spelen. Reinig het apparaat niet door het af te spuiten of onder te dompelen in water. Sluit het apparaat nooit via een verlengsnoer aan op een stopcontact. Gebruik het apparaat nooit als het snoer, de stekker of de stekkerhouder beschadigd is. Zorg ervoor dat het netsnoer niet te strak wordt getrokken of in aanraking komt met scherpe voorwerpen of randen. Alle onderhoudswerkzaamheden, behalve het regelmatig schoonmaken of het vervangen van het filter, moeten door een erkende servicetechnicus worden uitgevoerd.



LET OP: Het apparaat moet in verticale positie worden gebruikt. Niet omdraaien.

De luchtontvochtiger moet verticaal worden opgeslagen en vervoerd, omdat de compressor anders onherstelbaar beschadigd kan raken. Wacht 24 uur met het apparaat in rechtopstaande positie voordat u het inschakelt. Anders kan het apparaat beschadigd raken en vervalt de garantie. Wacht na het uitschakelen van de luchtontvochtiger 10 minuten voordat u hem weer inschakelt. Zo voorkomt u schade aan de compressor.



LET OP: Sluit het apparaat nooit aan op een externe tijdschakelaar en haal de stekker niet uit het stopcontact terwijl het apparaat in werking is. Schakel het apparaat uitsluitend uit met de AAN/UIT-knop op het bedieningspaneel. Het niet naleven van deze veiligheidsmaatregel kan het apparaat beschadigen en de garantie ongeldig maken.

Plaats het apparaat altijd op een droog en stabiel oppervlak. Het apparaat mag niet in wasruimtes of natte ruimtes worden geplaatst. Plaats het apparaat in een ruimte zonder ontstekingsbronnen (bijv. open vlammen, een in werking zijnd gasapparaat of een in werking zijnde elektrische verwarming).

Het koelmiddel R290 voldoet aan de Europese milieuriichtlijnen. R290 heeft een laag GWP (broeikaspotentieel) van 3.

LET OP: Deze airconditioner bevat ca. 180 g koelmiddel R290. Het koelmiddel kan reukloos zijn. Niet gebruiken of opslaan in ongeventileerde ruimtes met een oppervlakte van minder dan 18,2 m² per apparaat. Uit de buurt van ontstekingsbronnen houden.

De ruimte moet zo zijn ingericht dat stagnatie of mogelijk lekken van koelmiddelgas wordt voorkomen, aangezien er bij contact van het koelmiddel met elektrische verwarmingstoestellen, ovens of andere ontstekingsbronnen brand- of explosiegevaar bestaat. Gebruik het product niet en neem contact op met uw dealer als er schade aan het apparaat is ontstaan die het koelmiddelsysteem zou kunnen hebben aangetast. Het koelmiddelsysteem mag niet worden geperforeerd of doorboord.

TIPS VOOR ENERGIEBESPARING EN APPARAATBESCHERMING




- Bedek de luchtinlaatroosters en luchtuitlaatroosters niet en zorg dat ze niet worden geblokkeerd.
- Voor optimale prestaties moet de minimale afstand tot muren of voorwerpen 50 cm bedragen.
- Houd de filters schoon. Onder normale omstandigheden hoeven de filters slechts ongeveer om de drie weken te worden schoongemaakt. Aangezien de filters deeltjes uit de lucht filteren, kan het, afhankelijk van de luchtkwaliteit, nodig zijn om ze vaker te reinigen.
- Stel bij de eerste ingebruikname de ventilatorsnelheid in op maximaal en de thermostaat op 5 graden lager dan de huidige temperatuur.
- Zet vervolgens de ventilatorschakelaar op laag en de thermostaat op het gewenste niveau.

Functies

- 4-in-1: koeling, ventilator, ontvochtiger, luchtzuivering
- Aanbevolen voor ruimtes tot 20 m²
- 24-uurs start-/stoptimer
- Digitale thermostaat tussen 16 °C en 32 °C
- Afstandsbediening

- Automatische herstart om de instellingen te behouden bij stroomuitval
- Wielen voor verbeterde mobiliteit




Overzicht

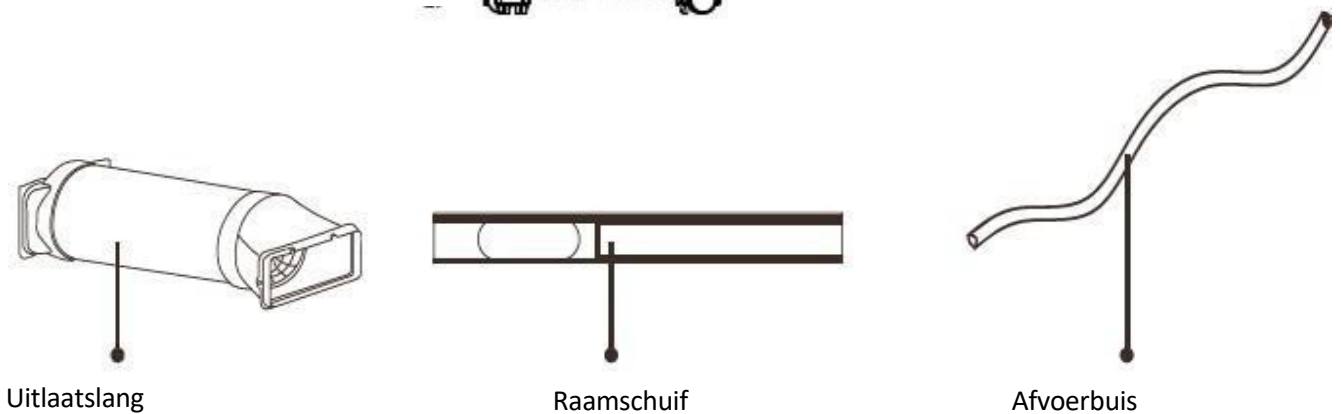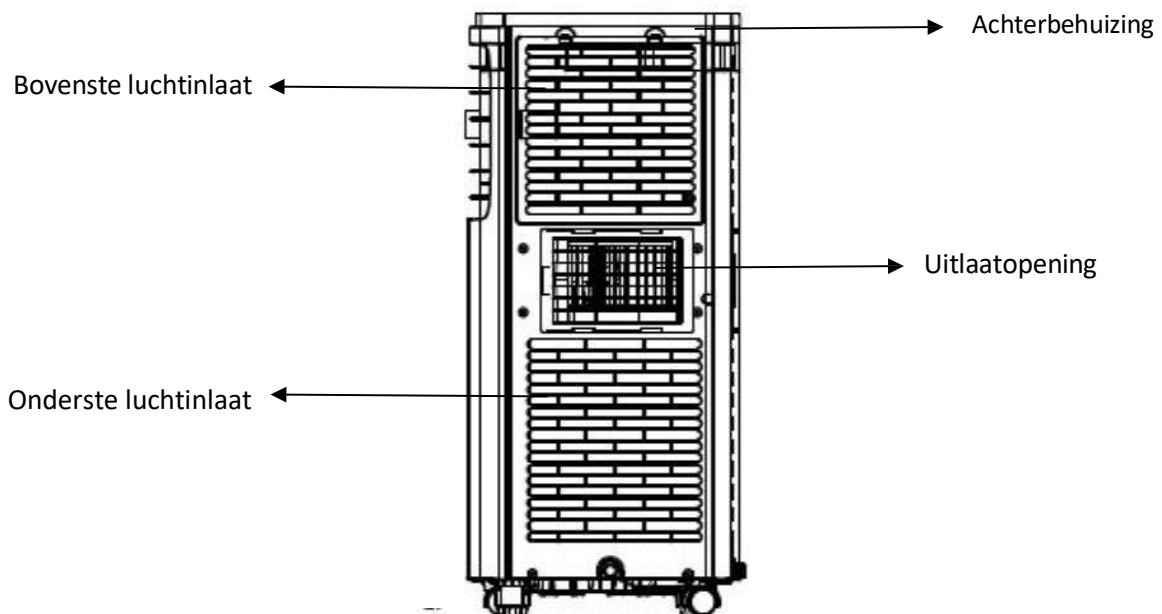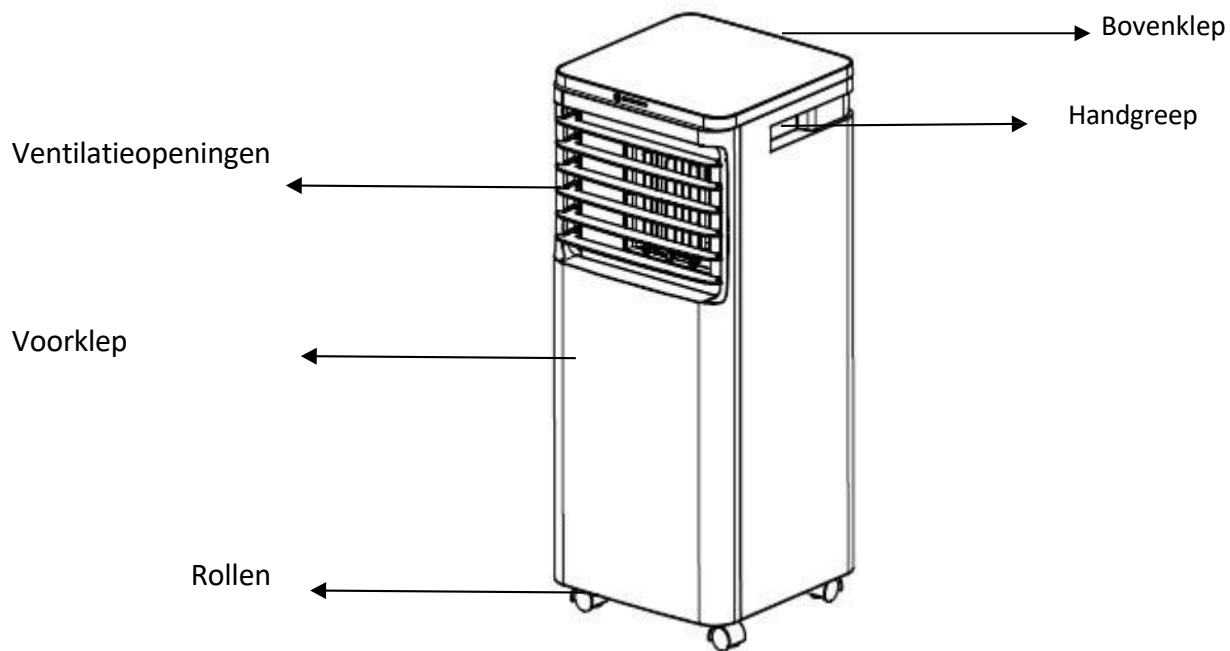

INSTALLATIE


WAARSCHUWING: Laat dit apparaat vóór gebruik minimaal 3-4 uur rechtop staan.

Dit apparaat kan gemakkelijk van de ene naar de andere ruimte worden verplaatst. Let erop dat het apparaat tijdens transport altijd rechtop wordt gehouden en vervolgens op een vlakke ondergrond wordt geplaatst.

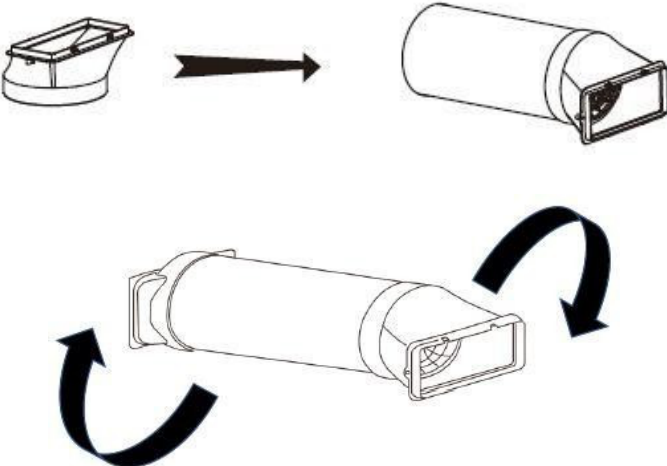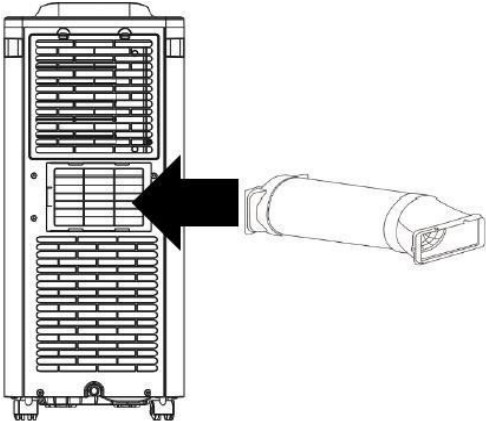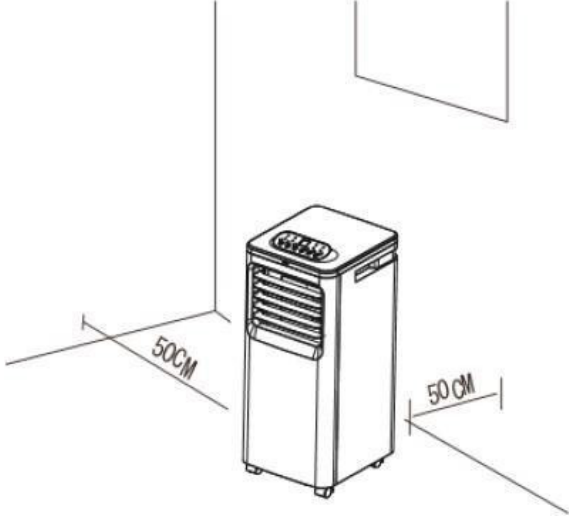	1. Bevestig de aansluiting aan het uiteinde van de slang door het uiteinde uit te trekken en te draaien totdat deze stevig vastzit (minstens 3 volledige omwentelingen). 2. Bevestig de slang aan de uitlaatadapter op dezelfde manier door het uiteinde van de slang te draaien tot deze stevig vastzit (minstens 3 volledige omwentelingen).
3. Schuif de uitlaatadapter in de daarvoor bestemde positie aan de achterkant van het apparaat.	
	4. Zorg ervoor dat het apparaat rechtop staat en dat de luchtinlaat- en uitlaatroosters niet worden geblokkeerd en dat er minimaal 50 cm vrije ruimte is aan de zijkanten en achterkant van het apparaat.


OPMERKINGEN:

- De raamkit is alleen bedoeld voor installatie in schuiframen of -deuren en draaikiëpramen of -deuren. De raamkit is niet geschikt voor andere soorten ramen.
- De adapter kan bij de meeste ramen/deuren zonder de schuifrail worden gebruikt.
- Zorg er bij gebruik van de airconditioner voor dat de opening rond de aansluiting zo klein mogelijk is, anders zal de koeling minder efficiënt zijn.
- De beste installatiemethode is een wanddoorvoer. Door een correcte ventilatie wordt de warme lucht uit de ruimte afgevoerd en wordt deze tegelijkertijd efficiënt gekoeld.
- Uw airconditioner moet zonder afvoerslang in de ontvochtigingsmodus worden gebruikt. Bij gebruik van deze modus moet een externe watertank worden gebruikt, die regelmatig gecontroleerd en geleegd moet worden voordat deze overloopt. Er kan ook een vaste afvoerleiding worden geïnstalleerd of een externe condenswaterpomp worden gebruikt voor onbewaakt gebruik.

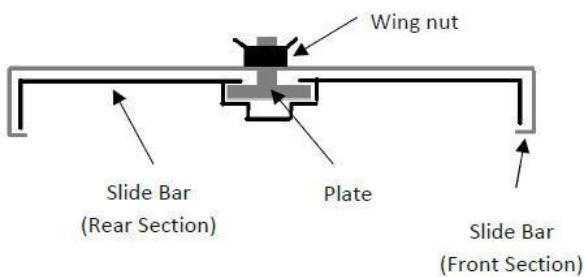

1. Schuif het achterste deel van de schuifrail op het voorste deel en lijn het paneel zo uit dat het in de groef loopt. Verleng de rail en zet deze vast met de meegeleverde vleugelmoer.

2. Schuif het schroefdraad van het paneel door het gat in het achterste deel van de voorste schuifrail.
3. Open het raam gedeeltelijk en plaats de verlengde schuifrail in positie voordat u het raam sluit.
4. Bevestig de adapter in de opening van de schuifrail.

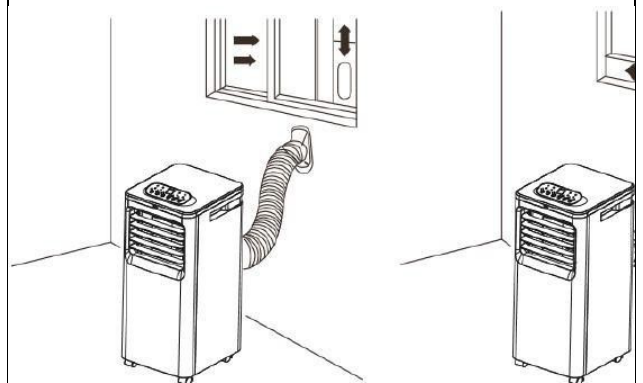





De lengte van de flexibele slang varieert van ongeveer 30 cm tot

Als de slang verder dan deze lengte wordt verlengd, kan dit storingen van het apparaat veroorzaken, wat kan leiden tot het vervallen van de garantie.

De luchtafvoeropening moet goed geventileerd zijn en mag niet verstopt raken, omdat dit kan leiden tot oververhitting van het apparaat.


Houd de slang zo recht en kort mogelijk en buig deze niet meer dan 30 graden om de prestaties van het apparaat te behouden. Overmatige buigingen van de slang kunnen verhinderen dat het apparaat warme lucht afvoert, wat kan leiden tot interne schade en het vervallen van de garantie.

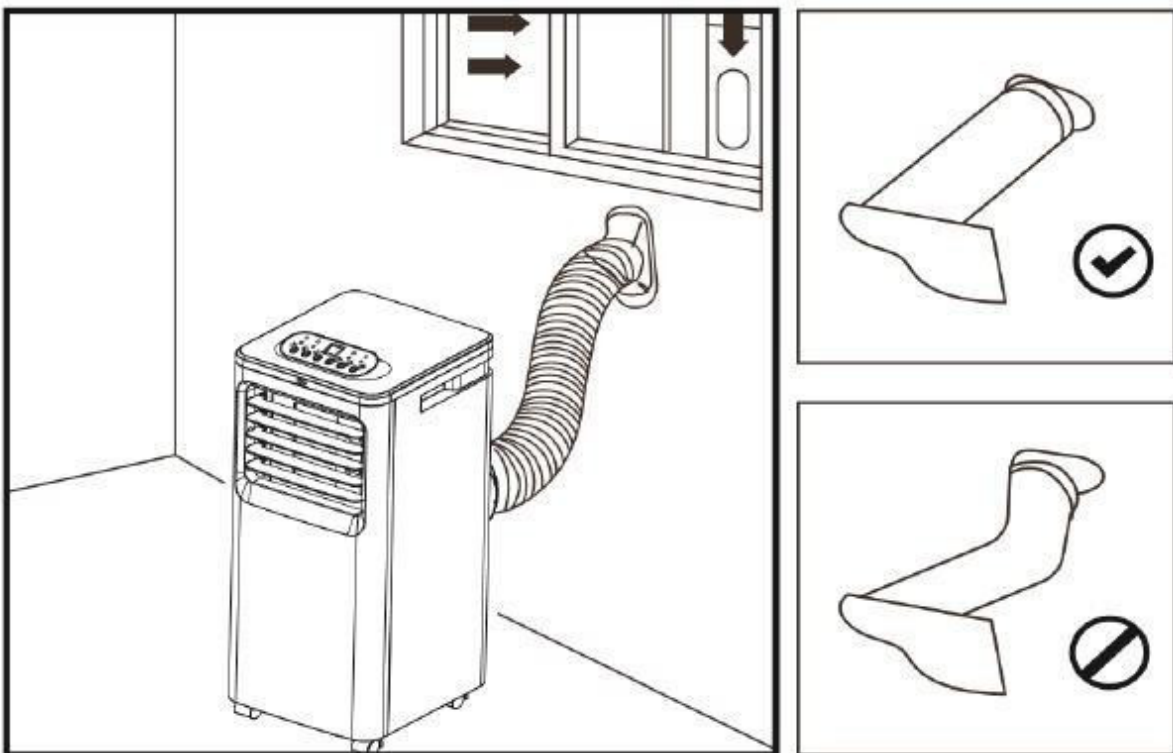

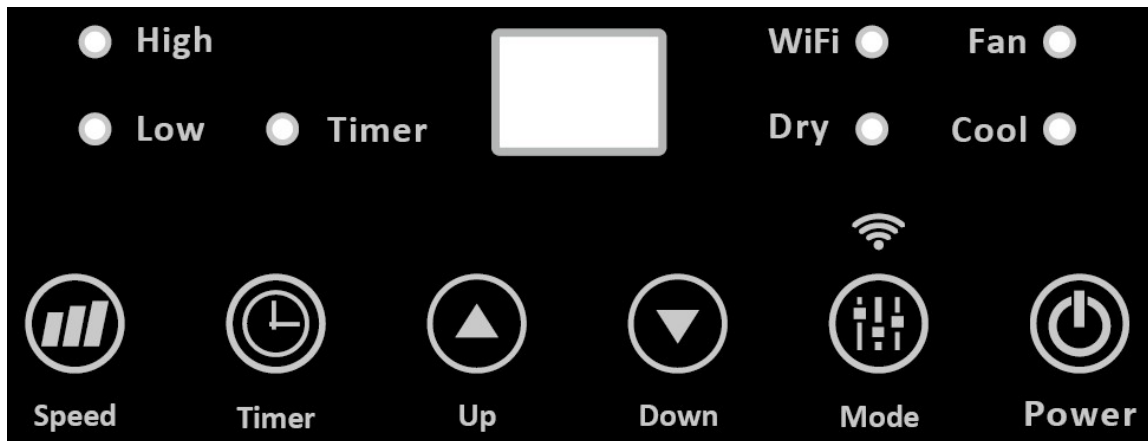

	Druk op de POWER-knop om het apparaat in of uit te schakelen.
	Druk op de MODE-knop om tussen de 3 modi te wisselen; de indicator van de gekozen modus licht op. COOL: De ruimte wordt gekoeld met koude lucht die via de voorste luchtuitlaat wordt uitgeblazen, terwijl warme lucht via de afvoerslang wordt afgevoerd. De gewenste kamertemperatuur kan worden ingesteld tussen 16 en 32 graden. De gewenste temperatuur kan met de toetsen ▲ en ▼ worden ingesteld en de ventilatorsnelheid kan met de SPEED-knop worden gewijzigd. FAN: De ventilatorsnelheid kan worden aangepast door op de SPEED-knop te drukken. DRY (drogen, ontvochtigen) Het apparaat moet zonder afvoerslang worden gebruikt en zo worden ingesteld dat het continu vocht uit de lucht verwijdt. Het apparaat werkt met een lage ventilatorsnelheid en toont "dH" op het display.
	Druk op de SPEED-knop om tussen de twee ventilatorsnelheden te wisselen. De leds geven de huidige snelheid aan. De ventilatorsnelheid kan in de DRY-modus niet worden aangepast.

 	De toetsen ▲ en ▼ worden gebruikt om de temperatuur in de COOL-modus en de duur van de TIMER in te stellen. In de modi FAN en DRY worden deze toetsen niet gebruikt. Druk beide toetsen tegelijk in om te wisselen tussen Celsius en Fahrenheit.
	TIMER VOOR INSCHAKELEN Houd in stand-bymodus de TIMER-knop ingedrukt om de inschakeltimer in te stellen. Gebruik de toetsen UP en DOWN om de tijd in te stellen (1 tot 24 uur). De timerindicator licht op en het apparaat schakelt na de ingestelde tijd automatisch in.
	TIMER VOOR UITSCHAKELEN Wanneer het apparaat met de gewenste instellingen werkt, houdt u de TIMER-knop ingedrukt om de uitschakeltimer in te stellen. Gebruik UP en DOWN om de tijd in te stellen (1 tot 24 uur). De timerindicator licht op en het apparaat schakelt na de ingestelde tijd uit.

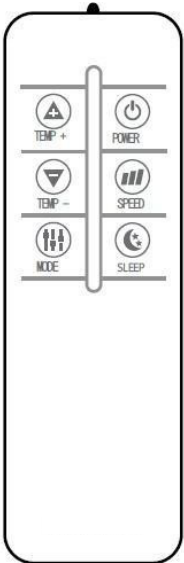Fernbedienung		
	 POWER	Druk op deze knop om het apparaat in of uit te schakelen.
	 TEMP -	Druk op deze knop om de gewenste temperatuur of timertijd te verlagen.
	 TEMP +	Druk op deze knop om de gewenste temperatuur of timertijd te verhogen.
	 SPEED	Druk op deze knop om tussen de twee ventilatorsnelheden te wisselen.
	 SLEEP	Druk op de slaapknop om de slaapmodus te activeren.
	 MODE	Druk op deze knop om te wisselen tussen de modi COOL, DRY en FAN.

OPMERKING: Het ontwerp van de afstandsbediening kan door productverbeteringen afwijken van de afbeelding.

MULTI-BESCHERMINGSFUNCTIES

Vorstbeveiliging

In de COOL- of DRY-modus schakelt het apparaat automatisch uit wanneer de temperatuur te laag wordt, totdat deze weer stijgt.

Overloopbeveiliging

Wanneer het waterniveau in de interne tank te hoog wordt, stopt het apparaat en klinkt er een alarm. Op het display verschijnt "E4". Leeg de watertank om het apparaat opnieuw te starten. Daarna hervat het automatisch de werking.

Automatische ontdooiing

Het apparaat beschikt over een automatische ontdooifunctie. Als de temperatuur van de interne warmtewisselaar te laag wordt, wordt het apparaat automatisch ontdooid.

Automatische thermische beveiliging

Om de levensduur te verlengen, schakelen compressor en motor uit wanneer de temperatuur buiten het toegestane bereik valt. Het apparaat start automatisch opnieuw zodra de temperatuur normaliseert.

Compressorbeveiliging

Er is een startvertraging van 3 minuten om schade aan de compressor te voorkomen.


ENTLEERUNG DES INTERNEN WASSERTANKS

HANDMATIG LEEGMAKEN

Wanneer de interne watertank vol is, stopt het apparaat en verschijnt "E4". Schakel het apparaat uit en trek de stekker uit het stopcontact. Beweeg het apparaat niet abrupt om lekkage te voorkomen. Plaats een bak onder de afvoeropening. Verwijder de afvoerdop en de rubberen stop zodat het water kan weglopen. Plaats na het legen de stop en dop terug.

CONTINUE AFVOER

Verwijder de afvoerdop en rubberen stop onderaan het apparaat. Sluit een slang aan op de afvoeropening. Deze kan worden aangesloten op een afvoersysteem, naar buiten worden geleid (zwaartekracht) of met een pomp worden gebruikt.

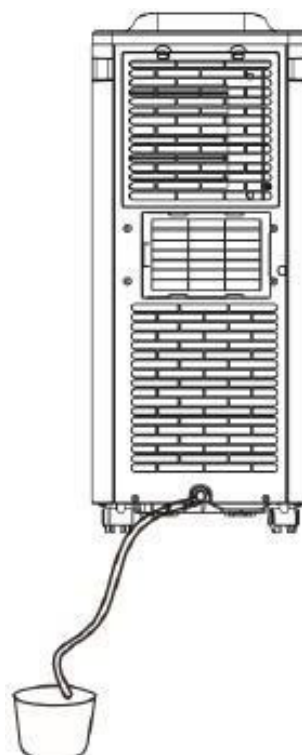

Opmerking:

- Dit model heeft een zelfverdampingsfunctie die het legen vermindert.
- Bij correcte ventilatie wordt het meeste water hergebruikt en verdampt.
- Gebruik geen continue afvoer als u deze functie wilt benutten.

REINIGING EN ONDERHOUD

WAARSCHUWING: Schakel het apparaat uit en trek de stekker uit het stopcontact vóór reiniging!

Reiniging van de buitenkant

Gebruik een zachte, vochtige doek. Gebruik geen chemische middelen zoals benzine, alcohol of oplosmiddelen.

Reiniging van het luchtfilter


Een verstopt filter vermindert de werking. Reinig het filter ongeveer elke twee weken of vaker indien nodig.

Reinigen Sie den oberen Rahmen des Filtersiebs

Schuif het filterframe uit het apparaat. Indien vastgeschroefd: verwijder de schroeven.

Reinig het filter in warm water (ca. 40°C) met een mild reinigingsmiddel.

Spoel het goed af en laat het in de schaduw drogen vóór terugplaatsing.

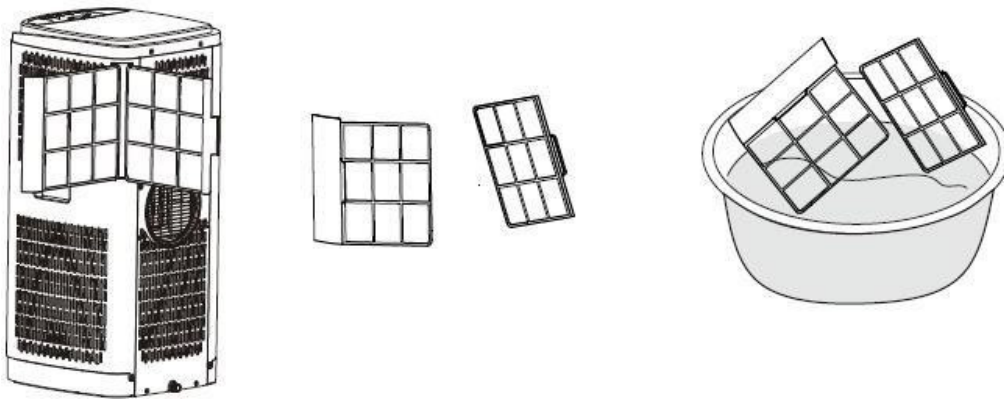

ONDERHOUD EINDE SEIZOEN

- Verwijder de rubberen stop en leeg de watertank
- Zet het apparaat op lage ventilatorsnelheid
- Laat het een halve dag draaien om het systeem te drogen
- Schakel het apparaat uit en trek de stekker uit
- Plaats de stop terug
- Rol het snoer op en berg het op
- Verwijder en bewaar de afvoerslang
- Dek het apparaat af en bewaar het op een droge plaats
- Verwijder de batterijen uit de afstandsbediening en bewaar ze veilig

- Wikkel het snoer op, bind het samen en leg het in het daarvoor bestemde opbergvak.
- Koppel de afvoerslang los en bewaar deze veilig.
- Dek het apparaat af en bewaar het op een droge plaats.
- Verwijder de batterijen uit de afstandsbediening en bewaar of verwijder ze veilig.

Bewaar alle accessoires samen met het apparaat voor het volgende seizoen.

PROBLEEMOPLOSSING

Repareer of demonteer de airconditioner niet zelf. Onjuiste reparaties laten de garantie vervallen en kunnen storingen veroorzaken die letsel of materiële schade tot gevolg hebben. Gebruik het apparaat alleen volgens de instructies in deze handleiding en voer alleen de hier beschreven werkzaamheden uit.

Problemen	Reden	Oplossing
De airconditioner werkt niet.	De airconditioner werkt niet.	Schakel de airconditioner in nadat deze op een stopcontact is aangesloten.
	Op het display verschijnt "E4".	Laat het water weglopen.
	De omgevingstemperatuur is te laag of te hoog.	Gebruik het apparaat alleen binnen een temperatuurbereik van 7–35 °C (44–95 °F).
	In de koelmodus is de kamertemperatuur lager dan de ingestelde temperatuur.	Pas de gewenste temperatuur aan.
	In de droogmodus is de omgevingstemperatuur laag.	De omgevingstemperatuur moet hoger zijn dan 16 °C (60 °F).
De koelprestaties zijn onvoldoende.	Direct zonlicht.	Gebruik gordijnen om direct zonlicht te verminderen.
	Deuren of ramen zijn open; er zijn veel mensen aanwezig; of er zijn andere warmtebronnen (bijv. koelkasten).	Sluit deuren en ramen; verhoog indien nodig de capaciteit van de airconditioner.
	Het filter is vervuild.	Reinig of vervang het filter.
	De luchtinlaat of -uitlaat is geblokkeerd.	Verwijder blokkades: zorg voor correcte ventilatie zoals beschreven in deze handleiding en controleer dat de slang niet geknikt is.
Luid geluid.	De airconditioner staat niet op een vlakke ondergrond.	Plaats de airconditioner op een vlakke en stabiele ondergrond (om geluiden te verminderen). Plaats de airconditioner op een vlakke en stabiele ondergrond (om geluiden te verminderen).t

De compressor werkt niet.	De oververhittingsbeveiliging wordt geactiveerd.	Wacht 3 minuten tot de temperatuur is gedaald en start het apparaat vervolgens opnieuw.
De afstandsbediening is defect.	De afstand tussen het apparaat en de afstandsbediening is te groot. De afstandsbediening is niet op de ontvanger gericht.	Houd de afstandsbediening dicht bij de airconditioner en zorg ervoor dat deze rechtstreeks op de ontvanger is gericht.
	De batterijen zijn leeg.	Vervang de batterijen.
Overig.	Er is geen of zeer weinig koelmiddel aanwezig.	Neem contact op met de serviceafdeling.
	Vorstbeveiliging.	Wachten op ontdooiing. De functie wordt automatisch hersteld. Geen verdere handelingen vereist.
	Beveiliging tegen hoge druk..	Zodra de interne gasdruk is gedaald, zal het apparaat weer normaal functioneren. Geen verdere handelingen vereist.

Mochten er zich problemen voordoen die niet in de tabel staan vermeld, of mochten de aanbevolen oplossingen niet werken, neem dan contact op met het servicecentrum.

Foutmeldingen

Code	Reden	Oplossing
	Apparaat in droogmodus.	Geen storing, geen actie vereist.
E2	Fout in kamertempatuursensor.	De kamertemperatuur ligt buiten het werkingssbereik. Schakel het apparaat niet in totdat de kamertemperatuur binnen het vereiste bereik is.
E4	„Wasser voll“ Alarm.	Leeg het waterreservoir.

Het MODE-lampje knippert.	Cool/dry mode,der Kompressor ist nicht gestartet, die Modus- leuchte blinkt. Das ist normal.	Het apparaat start weer zodra de beveiligingstijd (ongeveer 3 minuten) is verstreken.
---------------------------------	--	--

Technische gegevens

Model	KH-AC-7000
Koelcapaciteit	7000BTU
Ingangsvermogen	780 W
Energie-efficiëntieklasse	A
Luchtstroomsnelheden	2 fan speeds
Luchtvolume	260 m ³ /h
Koelmiddel	R290/180g
Geluidsvermogensniveau	56 dB(A)
Thermostaat	16°C - 32°C
Maximale werkdruk (inlaat/uitlaat)	1.0/3.5 MPa
Maximale toelaatbare druk	3.5 Mpa
Voeding	AC 220–240 V/50 Hz
Nettogewicht	21 kg
Afmetingen	31 x 70 x 31 cm

Het apparaat moet tijdens koelbedrijf naar buiten worden geventileerd. Conform EU-verordening EN 12102 is dit een lokale airconditioner met een geluidsniveau van minder dan 65 dB(A).



GARANTIE

Dit apparaat is getest volgens de EU-normen. Tijdens de garantieperiode verhelpen wij kosteloos – door reparatie of, naar onze keuze, vervanging – defecten aan het apparaat of accessoires* die het gevolg zijn van materiaal- of fabricagefouten.

Door het verlenen van garantie vervalt de oorspronkelijke garantieperiode niet en begint er ook geen nieuwe garantieperiode. De aankoopbon geldt als garantiebewijs. Zonder dit bewijs is geen kosteloze reparatie of vervanging mogelijk.

In geval van garantie dient u het complete apparaat samen met de aankoopbon terug te brengen naar de winkel waar het is gekocht.

*) Bij schade aan accessoires wordt het apparaat niet automatisch volledig vervangen. Neem in dit geval contact op met onze gratis servicehotline. Schade door gebroken glas- of kunststofonderdelen is voor rekening van de gebruiker.

Defecten aan accessoires of slijtageonderdelen, evenals reiniging, onderhoud of vervanging van slijtageonderdelen, vallen niet onder de garantie en zijn tegen betaling.

De garantie vervalt wanneer het apparaat is geopend of aangepast.

Na afloop van de garantieperiode kunnen reparaties worden uitgevoerd door gekwalificeerd personeel of onze reparatieservice. De kosten hiervoor worden niet meer door de verkoper vergoed.

BETEKENIS VAN HET VUILNISBAKSYMBOOL



Bescherm het milieu: gooi elektrische apparaten niet bij het huishoudelijk afval. Lever oude of niet meer gebruikte elektrische apparaten in bij daarvoor bestemde inzamelpunten.

Zo voorkomt u negatieve gevolgen voor milieu en gezondheid en draagt u bij aan recycling en hergebruik van elektrische en elektronische apparaten.

Informatie over inzamelpunten is verkrijgbaar bij uw gemeente.

VOORDAT U BEGINT: WIFI SMART BEDIENING

- Zorg ervoor dat uw router een standaard 2,4 GHz-verbinding ondersteunt.
- Als uw router dualband heeft, zorg ervoor dat beide netwerken verschillende namen (SSID) hebben. Uw internetprovider kan u hierbij helpen.
- Plaats de airconditioner tijdens de installatie zo dicht mogelijk bij de router.
- Schakel na installatie van de app de mobiele data uit en zorg dat uw telefoon via wifi met de router verbonden is.

DOWNLOAD DE APP OP UW TELEFOON

Download de app “TUYA SMART” uit de appstore van uw keuze. Gebruik hiervoor de QR-codes of zoek de app handmatig.



Android



IOS

BESCHIKBARE VERBINDINGSMETHODEN

De airconditioner heeft twee verbindingsmodi:

EZ (snelle verbinding) en **AP (toegangspunt)**.

De EZ-modus is snel en eenvoudig.

De AP-modus gebruikt een directe wifi-verbinding tussen telefoon en apparaat.

Houd vóór installatie, terwijl het apparaat is aangesloten maar uitgeschakeld, de MODE-knop 3 seconden ingedrukt (tot een pieptoon klinkt) om de wifi-modus te activeren.

Controleer of het apparaat in de juiste verbindingmodus staat. Dit wordt aangegeven door het knipperen van het wifi-lampje.


Verbindingstype	Knipperfrequentie
EZ (Snelle verbinding)	Knippert twee keer per seconde
AP (Toegangspunt)	Knippert één keer per seconde

WISSELEN TUSSEN VERBINDINGSMODI


Houd de MODE-knop 3 seconden ingedrukt om tussen de wifi-modi te wisselen.

APP REGISTREREN


1. Klik onderaan het scherm op 'Aanmelden'.

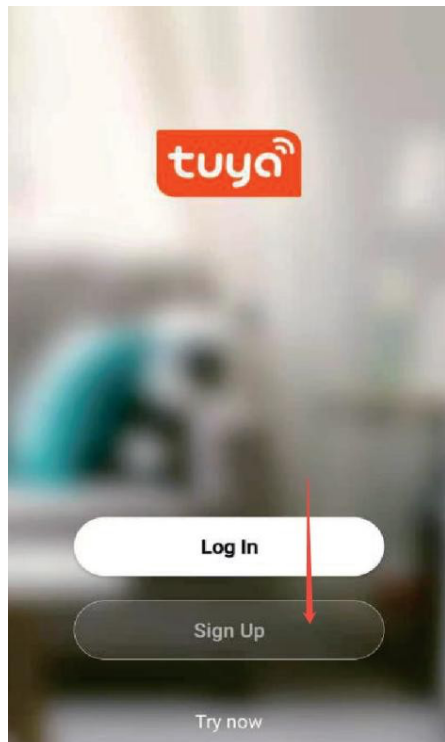


2. Lees het privacybeleid en klik op 'Akkoord'.

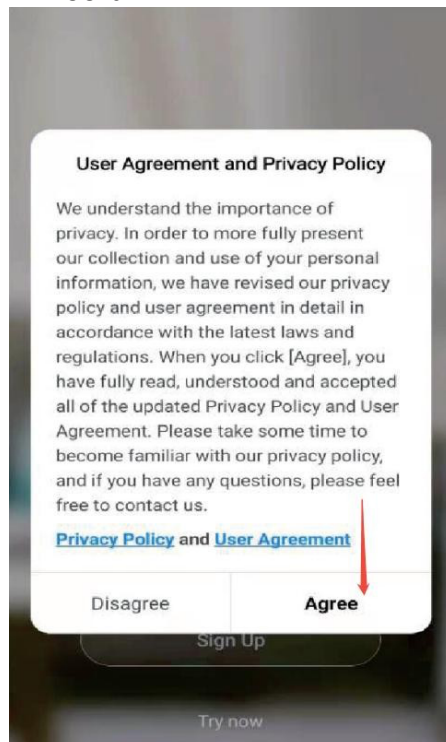


3. Voer uw e-mailadres of telefoonnummer in en klik op 'Doorgaan' om u te registreren.

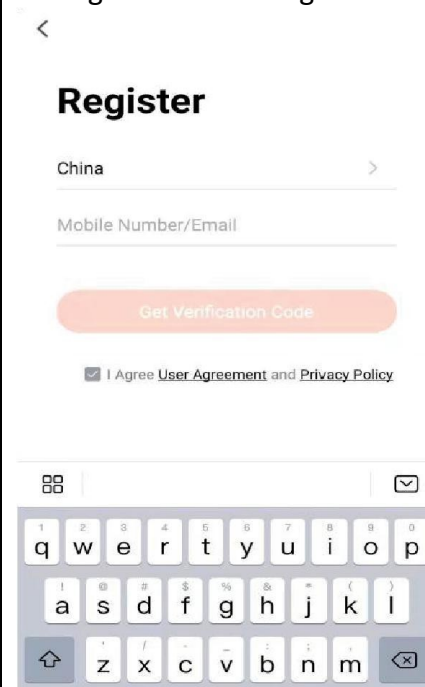


4. U ontvangt een verificatiecode via de methode die u in stap 3 hebt gekozen. Voer de code in de app in.

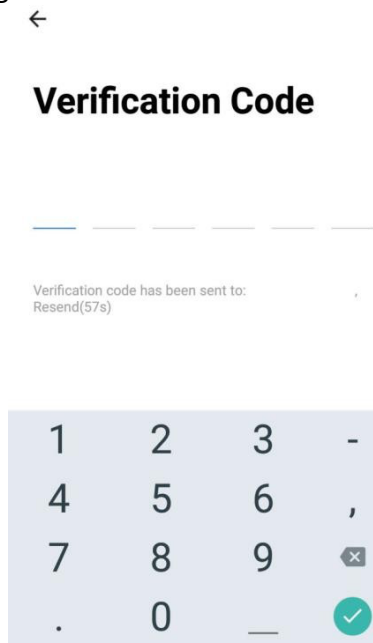

5. Voer uw gewenste wachtwoord in. Dit moet 6 tot 20 tekens lang zijn en letters en cijfers bevatten.

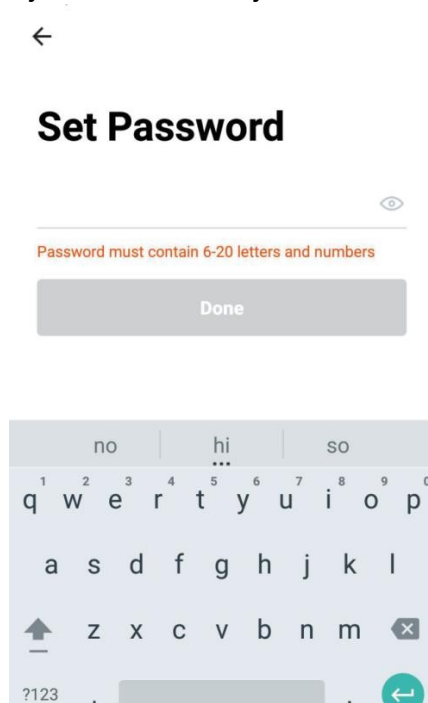


6. De app is nu geregistreerd. U wordt na registratie automatisch ingelogd.

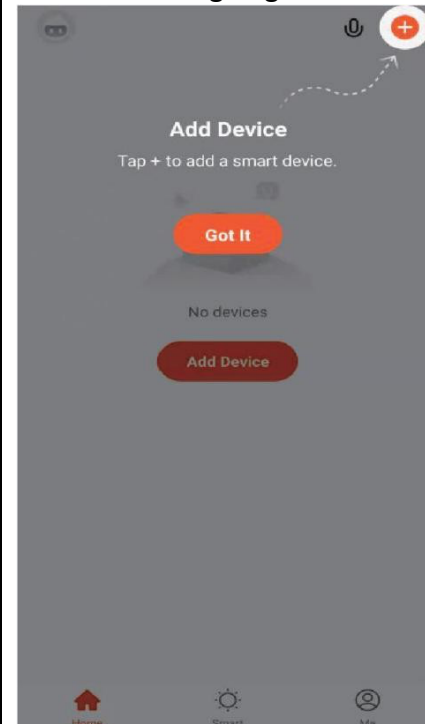


VERBINDEN IN EZ-MODUS

(Snelle verbinding) Controleer voordat u verbinding maakt of het apparaat in de stand-bymodus staat en of het wifi-lampje twee keer per seconde knippert. Zo niet, volg dan de instructies om de verbindingsmodus te wijzigen. Zorg er ook voor dat uw smartphone is verbonden met het wifi-netwerk. (We raden aan om mobiele data uit te schakelen tijdens de installatie.)


1. Open de app en tik op "+" om het apparaat toe te voegen.

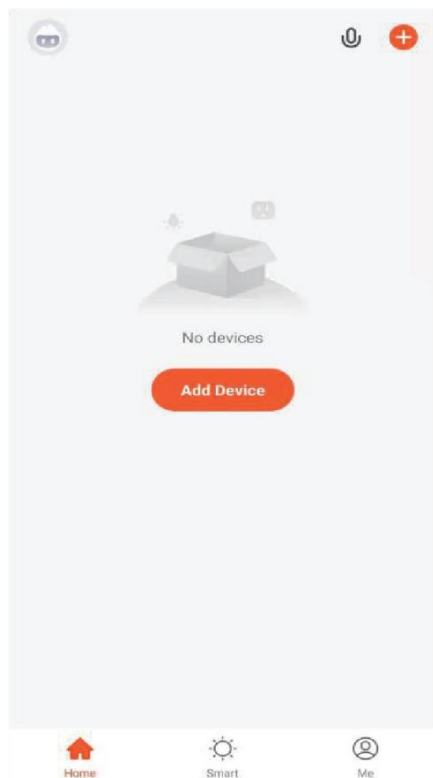


2. Selecteer in het tabblad "Grote huishoudelijke apparaten" het apparaattype: "Airconditioner (Wi-Fi)".

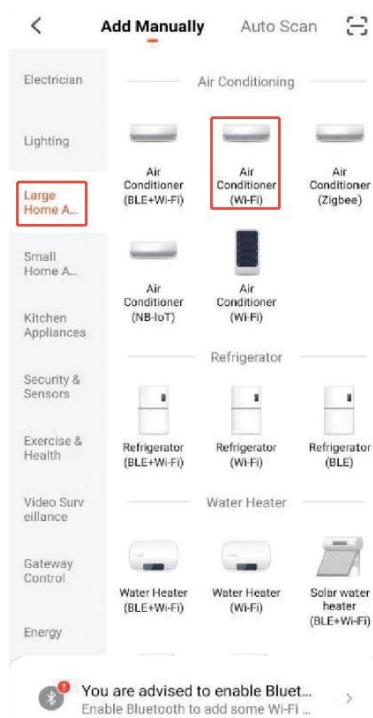


2. Selecteer uw netwerk, voer uw Wi-Fi-wachtwoord in en tik op "Volgende".

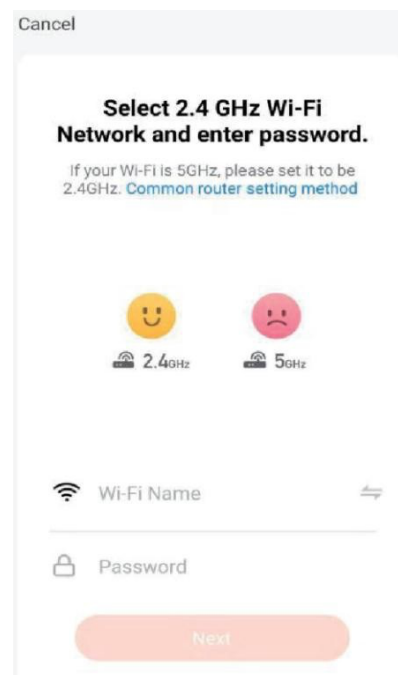

4. Controleer of het Wi-Fi-lampje op de airconditioner twee keer per seconde knippert. Tik vervolgens op de oranje knop onderaan het scherm om te bevestigen.

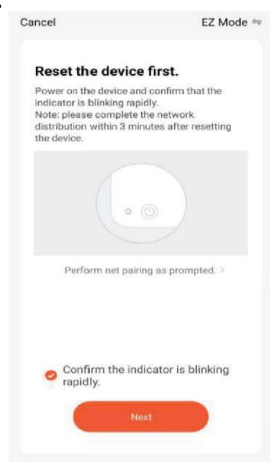


5. De instellingen worden nu naar de airconditioner overgezet. Wacht tot het proces is voltooid. Als het proces mislukt, probeer het dan opnieuw. Als het probleem aanhoudt, raadpleeg dan het gedeelte over probleemoplossing.

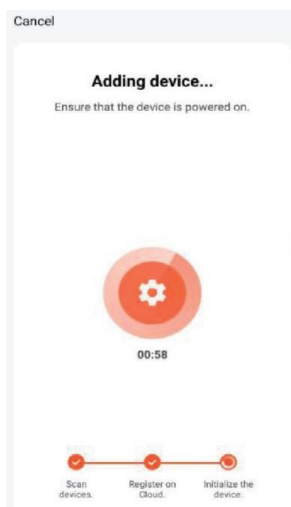


VERBINDEN IN AP-MODUS

(ALTERNATIEVE METHODE) Controleer voordat u een verbinding tot stand brengt of het apparaat in de standbymodus staat en of het wifi-lampje één keer per seconde knippert. Volg anders de instructies voor het wijzigen van de wifi-verbindingsmodus. Zorg er ook voor dat uw smartphone is verbonden met het wifi-netwerk. (We raden aan om mobiele data uit te schakelen tijdens de installatie.)


1. Open de app en tik op "+" om het apparaat toe te voegen.

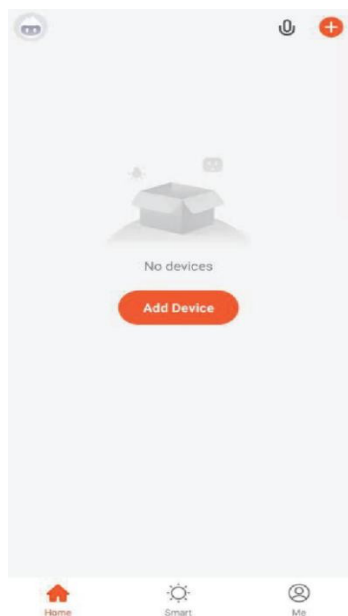


2. Selecteer in het tabblad "Grote huishoudelijke apparaten" het apparaattype "Airconditioner (Wi-Fi)".

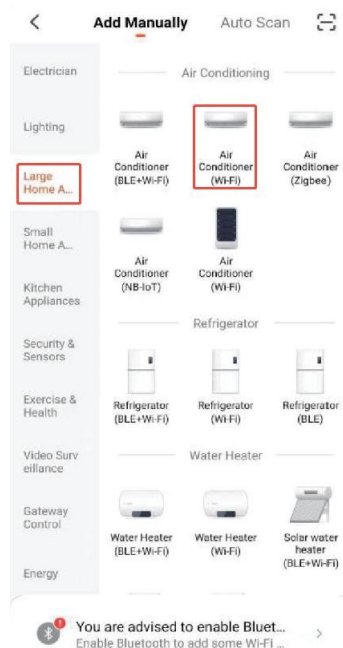


3. Selecteer uw netwerk, voer uw Wi-Fi-wachtwoord in en tik op "Volgende".

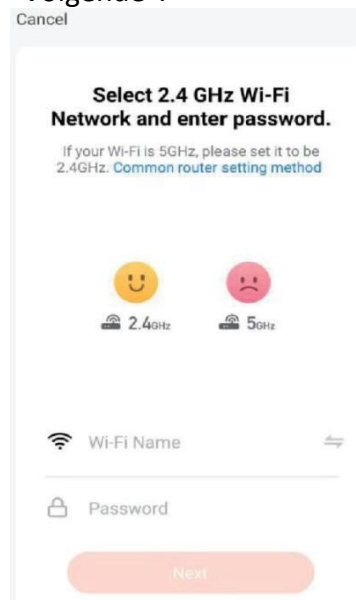


4. Controleer of het Wi-Fi-lampje op de airconditioner langzaam knippert (één keer per drie seconden). Selecteer vervolgens de AP-modus in de rechterbovenhoek en tik op de oranje knop onderaan het scherm om te bevestigen.

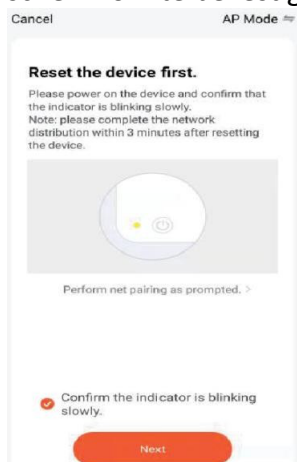

5. Ga naar de netwerkinstellingen van uw smartphone en maak verbinding met "smartLife xxx". Tik op de oranje knop onderaan het scherm om te bevestigen.

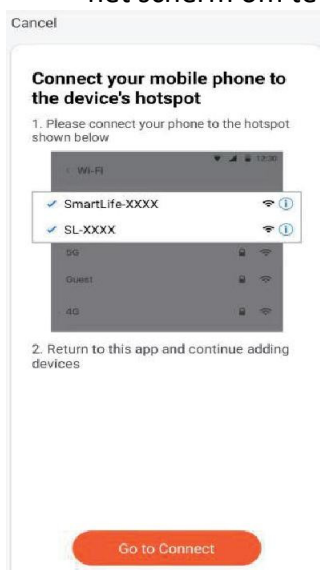


6. Ga naar de netwerkinstellingen van uw smartphone en maak verbinding met "smartLife xxx". Er is geen wachtwoord vereist. Ga vervolgens terug naar de app om de installatie te voltooien.

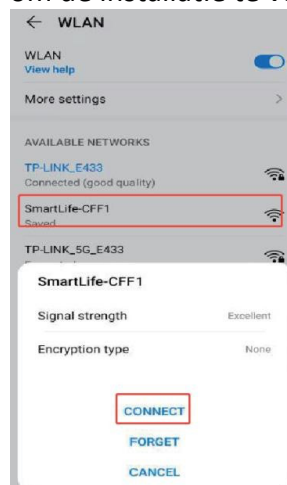

Hiermee worden de instellingen naar de airconditioner overgezet. Zodra het verbindingsproces is voltooid, ga je terug naar de netwerkinstellingen van je telefoon om te controleren of je telefoon opnieuw is verbonden met je wifi-router.

UW APPARAAT BEDIENEN VIA DE APP HET STARTMENU

Apparaat toevoegen: Voeg een apparaat toe aan de app en voltooi de installatie.

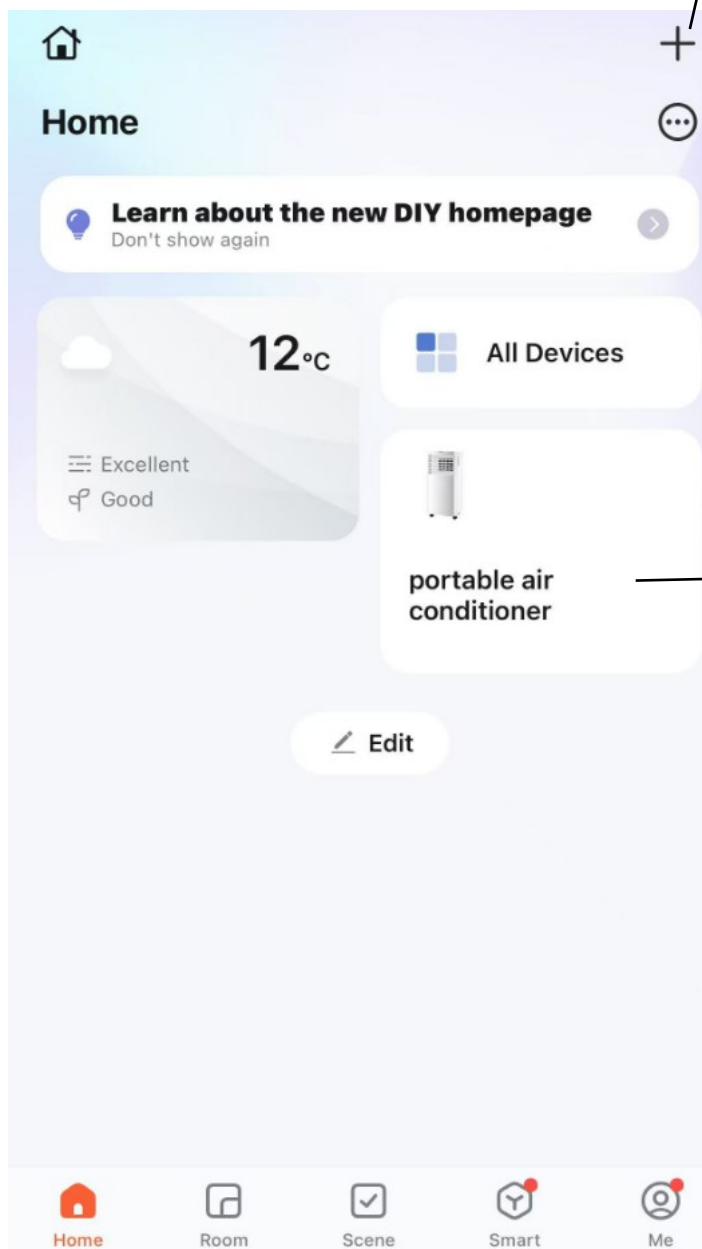

Uw apparaat: Druk op deze knop om het apparaatscherm te openen.

Startpagina: U keert terug naar dit scherm wanneer u zich in de tabbladen "Smart" of "Profiel" bevindt.


Smart Scene: Hiermee kunt u slimme gedragingen programmeren op basis van de interne en externe omgeving.

Profiel: Hiermee kunt u instellingen wijzigen en apparaten toevoegen met behulp van een QR-code die u van een vriend hebt ontvangen.

Elk apparaat heeft een eigen vermelding op het startscherm. Zo kunt u het apparaat snel in- en uitschakelen of het scherm van het apparaat openen om andere wijzigingen aan te brengen.

APPARAATSCHERM

Het apparaatscherm is het hoofdscherm van de airconditioner en biedt toegang tot de bedieningselementen voor het wijzigen van functies en instellingen.

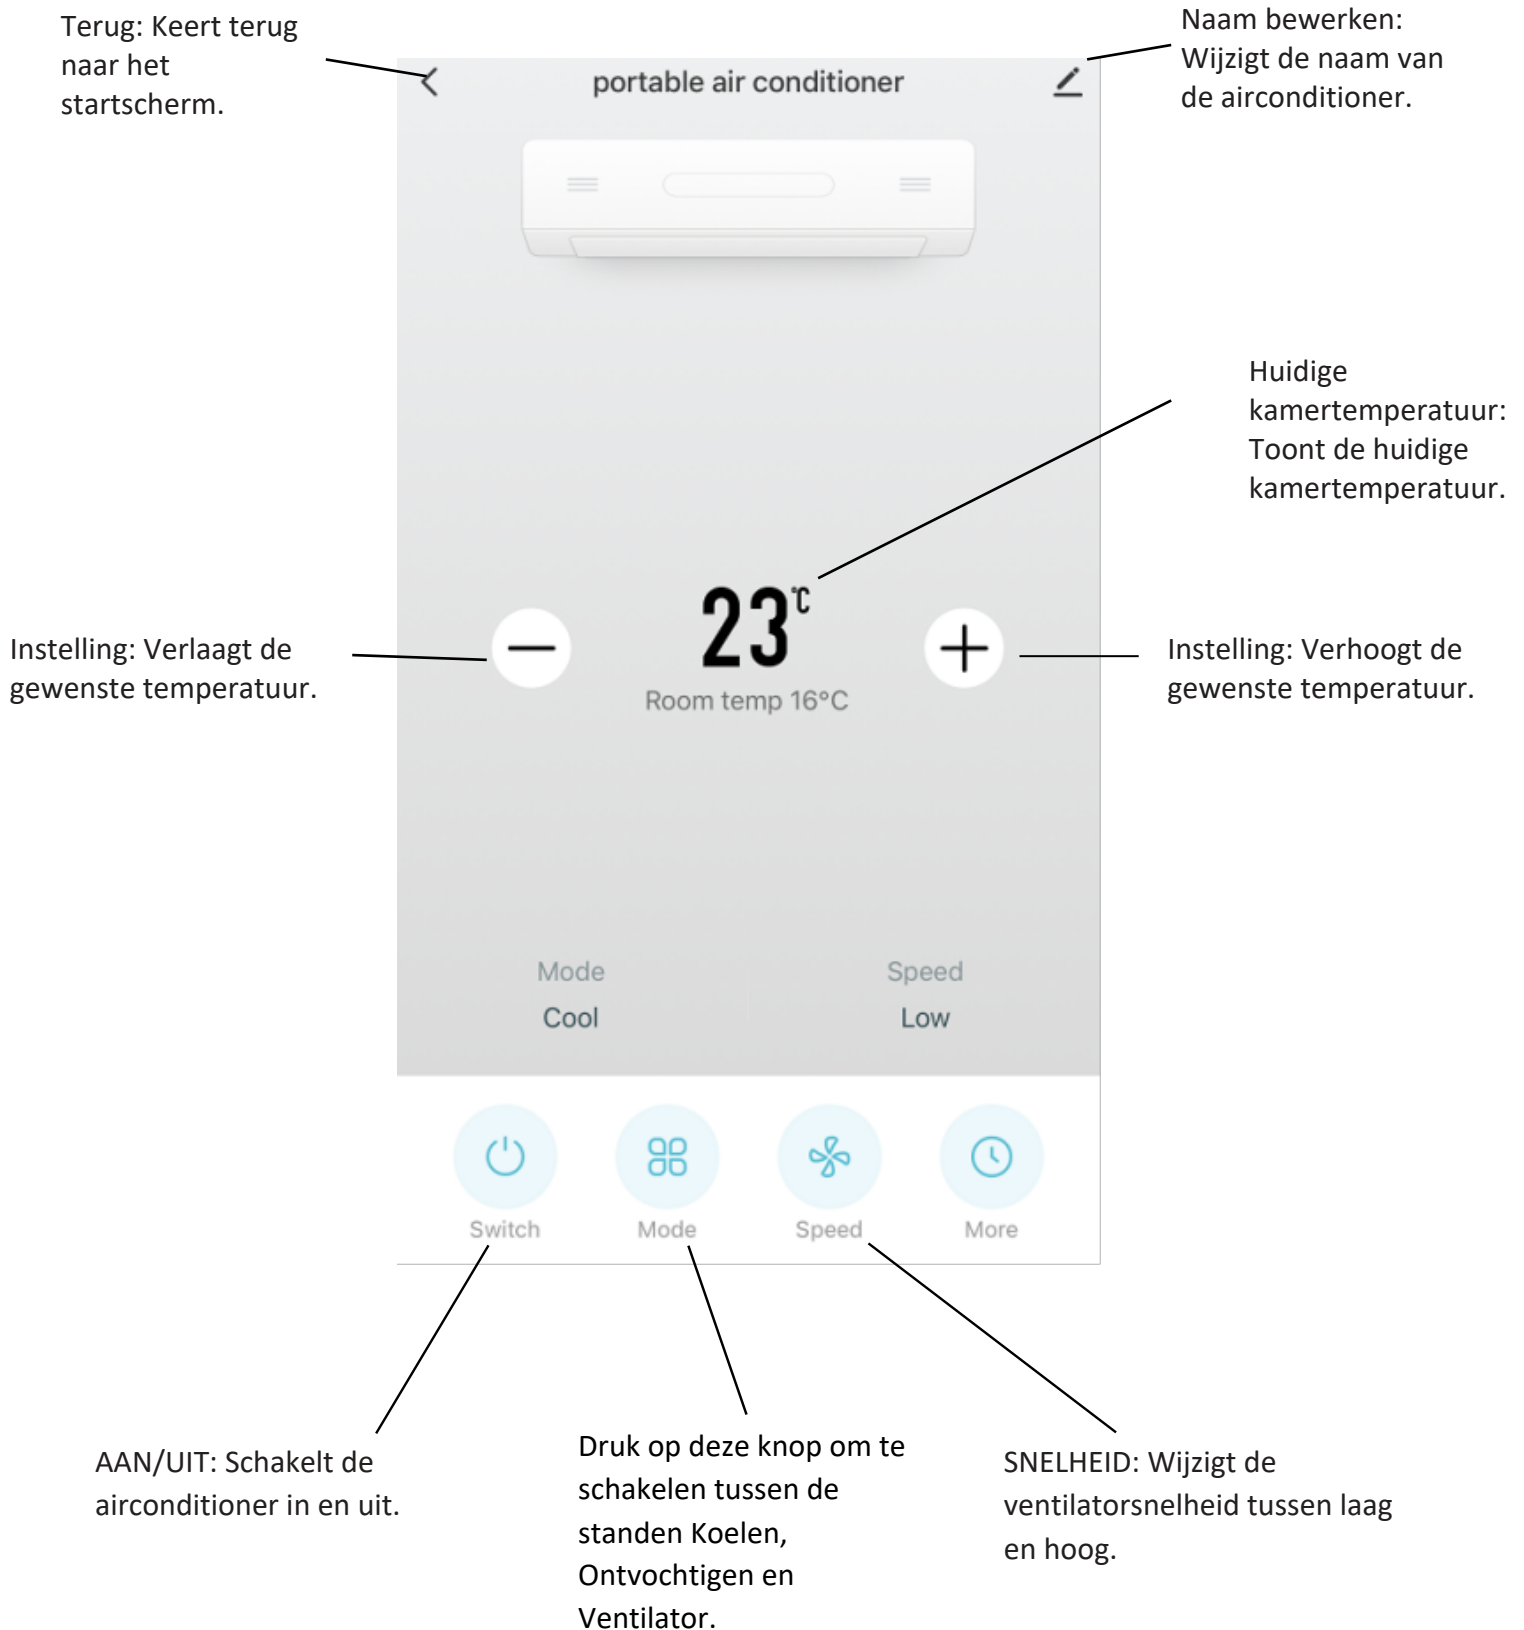

Omdat de app continu in ontwikkeling is, kunnen de lay-out en functies veranderen.

PROBLEMEN MET VERBINDING OPLOSSEN

1. Controleer of het apparaat is ingeschakeld en in de juiste wifi-modus staat.
2. Controleer of het wifi-wachtwoord correct is ingevoerd (let op hoofdletters).
3. Controleer of uw telefoon met hetzelfde wifi-netwerk verbonden is.
4. Zorg ervoor dat het netwerk 2,4 GHz ondersteunt (5 GHz wordt niet ondersteund) en dat het signaal sterk genoeg is.
5. Bij dualband: geef het 2,4 GHz-netwerk een andere naam (SSID). Raadpleeg uw provider voor hulp.
6. Controleer routerinstellingen: encryptie WPA2-PSK en autorisatie AES.
7. Probeer een andere verbindingsmethode (bijv. AP-modus als EZ niet werkt).



7000BTU Portable air conditioner MODEL: KH-AC-7000

OWNER'S MANUAL

SAFETY INSTRUCTIONS

Carefully read the instructions before operating the unit. This appliance is for indoor use only and intended for use in a domestic environment only. Any other use is not recommended by the manufacturer and may cause fire, electrical shocks or other injury to user or property and could result in a voided warranty. Installation must be in accordance with regulations of the country where the unit is used. Disconnect the power before dismantling, assembling or cleaning. Avoid touching any moving parts of the appliance. Never insert fingers, pencils or any other objects through the guard.



Do not leave children unsupervised with this appliance. Do not clean the unit by spraying it or immersing it in water.

Never connect the unit to an electrical outlet using an extension cord. Never operate this appliance if the cord, power adapter or plug is damaged. Ensure the power cord is not stretched or exposed to sharp objects/edges. Any service other than regular cleaning or filter replacement should be performed by an authorized service representative.



WARNING: THE APPLIANCE MUST WORK IN THE VERTICAL POSITION. DO NOT TURN IT OVER!

The dehumidifier must be stored and transported vertically, otherwise irreparable damage to the compressor may occur. You should wait for 24 hours with the appliance upright before starting the appliance. Failure to do so may damage the unit and void the warranty.

If you turn off the dehumidifier, wait 10 minutes before turning it back on. This prevents the compressor from being damaged.



CAUTION: NEVER CONNECT THE APPLIANCE TO AN EXTERNAL TIMER, OR REMOVE THE DEVICE FROM THE OUTLET WHILE IN OPERATION. Use only the ON / OFF button located on the control panel to turn the unit off. Failure to comply with this safety precaution could damage the appliance and void the warranty.

Always place the unit on a dry and stable surface. The appliance should not be installed in laundry or wet rooms. The appliance must be placed in a room without sources of ignition (for example: open flames, an operating gas appliance or an operating electric heater).

R290 refrigerant gas complies with European environmental directives. R290 has a low GWP (Global Warming Potential) of 3. This air conditioner contains around 180 g of R290 refrigerant gas. Refrigerant gas may be odourless.

Do not use or store in an unventilated space with an area smaller than 18.2 m² per unit.

The room must be such as to prevent stagnation of possible leaks of refrigerant gas as there could be a danger of fire or explosion should the refrigerant come into contact with electric heaters, stoves or other sources of ignition.

Do not use the product and contact the retailer for advice, if damage has occurred to the unit which may have compromised the refrigerant system. The refrigerant system should not be perforated or punctured.


ENERGY SAVING AND UNIT SAFETY PROTECTION TIPS



- Do not cover or restrict the air flow from the outlet or inlet grills.
- For maximum performance the minimum distance from a wall or objects should be 50cm.
- Keep the filters clean. Under normal conditions, filters should only need cleaning once every three weeks (approximately). Since the filters remove airborne particles, more frequent cleaning may be necessary, depending on the air quality.
- For the initial start-up set the fan speed to maximum and the thermostat to 5 degrees lower than the current temperature. After, set the fan switch to low and set the thermostat to your desired setting.

FEATURES

- **4 in 1:** Cooling, FAN, Dehumidifier, air purification
- Recommended for rooms up to 20 m²
- 24 Hours Start / Stop Timer
- Digital Thermostat between 16°C and 32°C
- Remote Control
- Auto-Restart to retain the settings in the event of power failure
- Castors for Enhanced Portability

OVERVIEW OF THE COMPONENTS



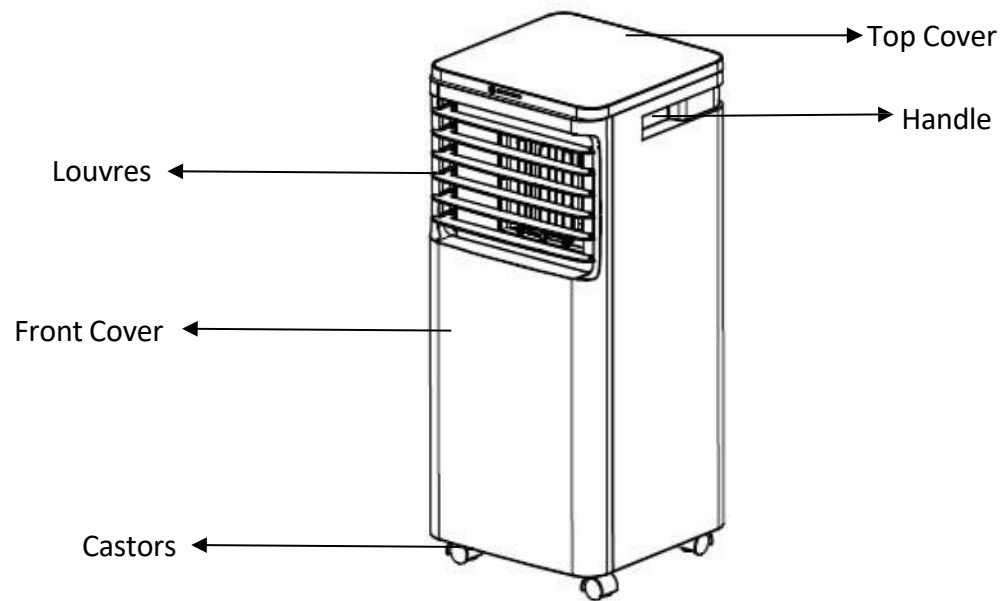


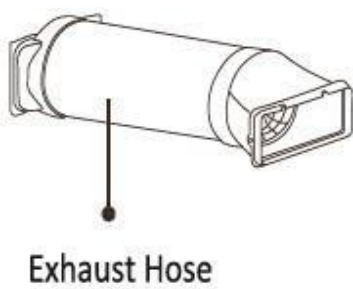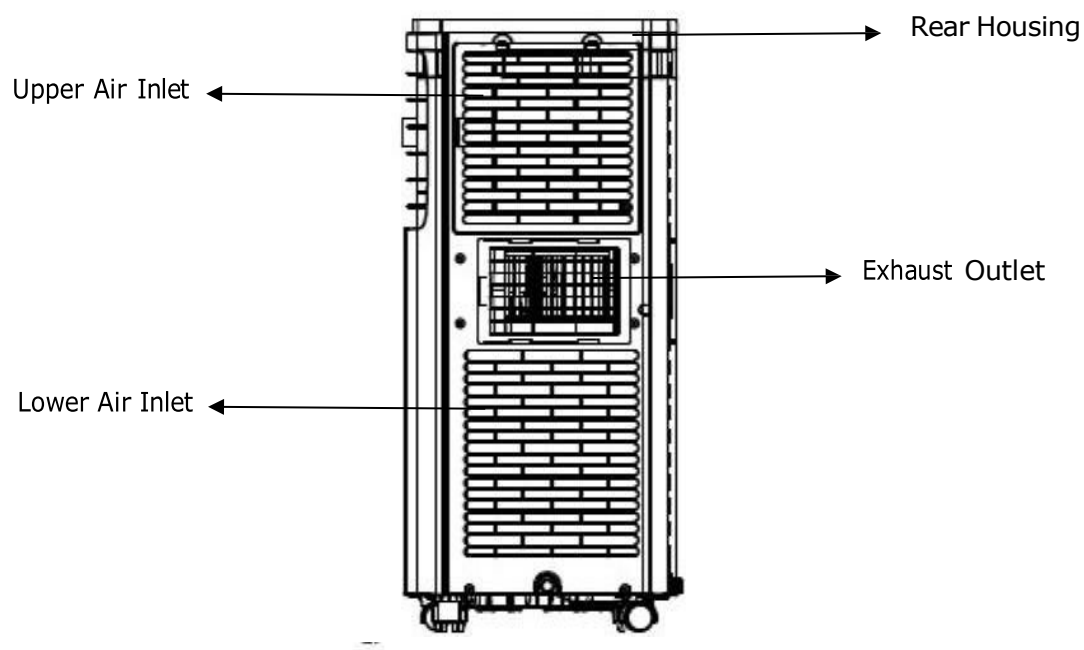

INSTALLATION

WARNING: Before using this unit, please keep it upright for at least 3-4 hours.


This unit can easily be moved from one room to another. While moving the unit please note that it must always be kept upright and then placed on an even surface.

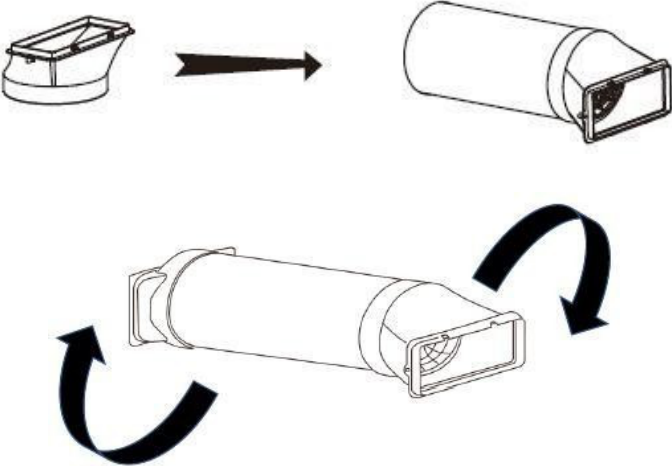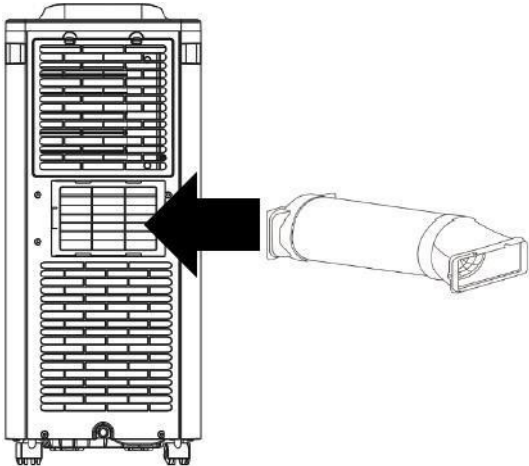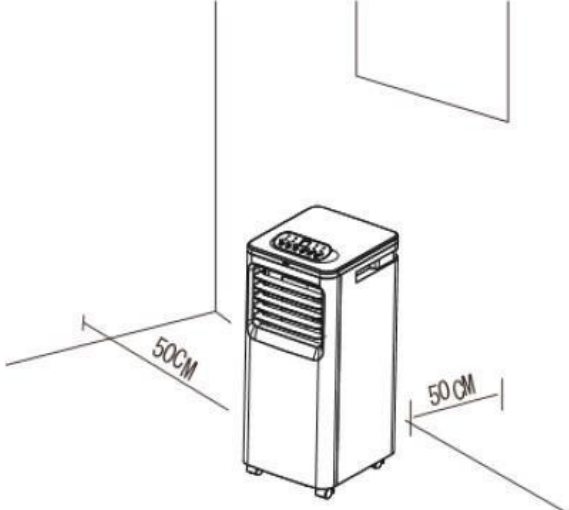	1. Attach the fishtail connector to the end of the hose, by extending the end and twisting until firmly attached (At least 3 full rotations). 2. Attach the Hose to the Outlet adaptor, in the same way by extending the end of the hose and twisting until firmly attached (At least 3 full rotations).
3. Slide the Outlet adaptor into position on the rear of the unit.	
	4. Make sure the unit is upright and there are no obstructions to the air inlets and outlet grills, with at least 50cm of space to the sides and rear of the unit.

INSTALLATION OF WINDOW KIT


NOTES:

- The window kit is only designed to be installed with sliding or sash windows or doors. The window kit is not designed or to be used with any other style of windows.
- The fishtail adaptor can be used without the slide bar with most windows / doors.
- When using the air conditioner ensure that the opening left around the fishtail is as small as possible as the cooling will be less efficient.
- The best form of installation is through a wall duct. By properly venting you expel hot air from your room while efficiently cooling it.
- Your air conditioner should be used without the vent pipe in dry mode. When using dry mode ensure that an external water tank is used, monitored and regularly emptied before overflowing. Permanent plumbing can be also installed for dry mode or an external uplift water pump can be set up for unattended use.

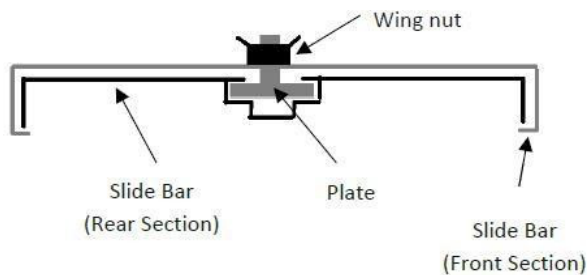


1. Slide the rear section of the slide bar onto the front section lining up the plate so it runs within the groove. Extend the bar to the required length and use the supplied wing nut to secure.

2. Push the screw thread of the plate through the hole in the rear of the front slide bar section.
3. Partially open the window and place the extended slide bar in position before closing the window onto it.
4. Fix the fishtail adaptor into the opening on the slide bar.

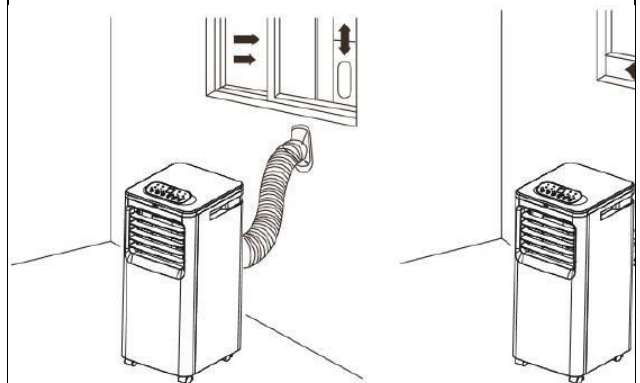

Important Safeguards!

-  The length of the soft hose extends from approximately 30 cm to 150 cm. If hose is extended above this length, the unit may malfunction which can invalidate the warranty.
- The outlet vent must be well ventilated and not obstructed as this will cause the unit to overheat.
- Keep the hose as straight and short as possible and avoid bending the air hose by more than 30 degrees to maintain the performance of the unit. Excessive bends in the hose may prevent the unit from expelling the hot air, which can lead to internal damage which would invalidate the warranty.

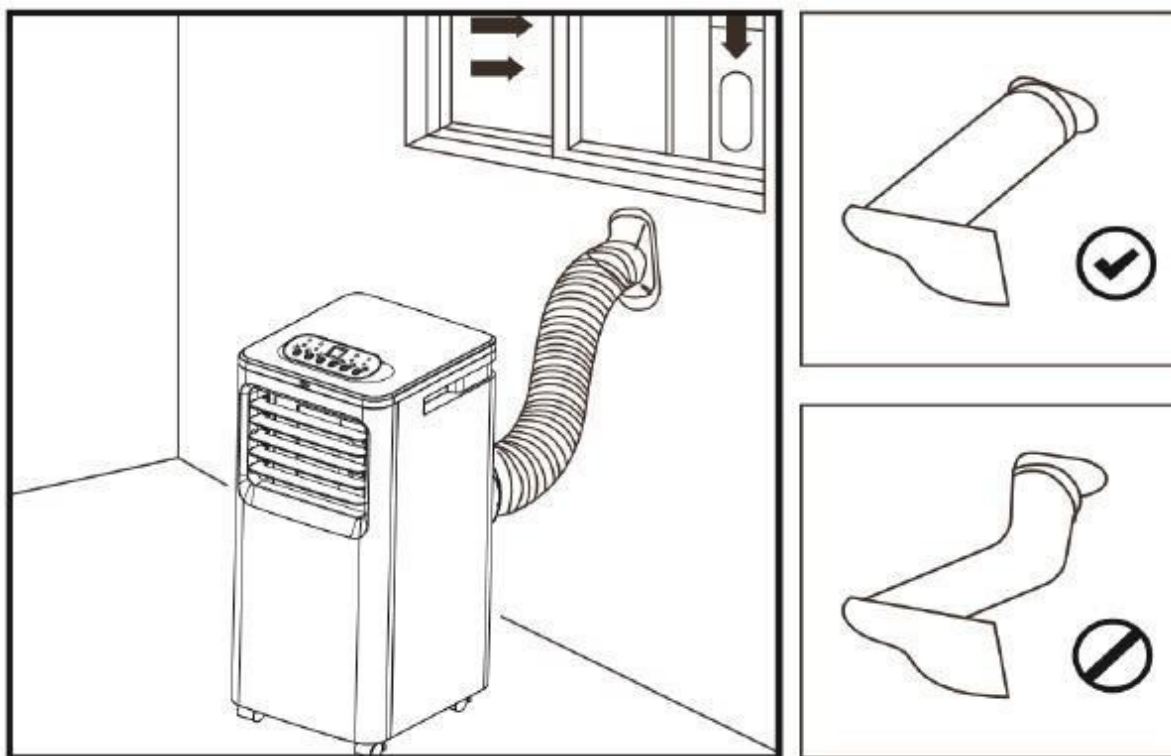


OPERATION



	Press the POWER button to turn the unit ON or OFF.
	Press the MODE button to cycle between the 3 modes, the indicator for the selected mode will be illuminated. COOL: The room is cooled with the cold air expelled through the front air outlet while hot air is expelled through the vent pipe. The desired room temperature can be set between 16 and 32 degrees using the ▲ and ▼ buttons, and the fan speed can be changed using the SPEED button. FAN: The fan speed can be changed pressing the SPEED button. DRY (DEHUMIDIFY) The unit should be operated without the vent hose and with the unit set up for continuous drainage to remove moisture from the air. The unit will operate at low fan speed and will show dH on the display.
	Press the SPEED button to change between the two fan speeds. The LED's will indicate the currently selected fan speed. The fan speed cannot be changed in DRY modes.
 	Used to adjust the temperature in COOL mode and to set the duration of the TIMER. The buttons are not used in FAN or DRY modes. Press both buttons together to change between displaying the temperature in Celsius and Fahrenheit.

	POWER ON TIMER With the appliance in standby, press and hold the TIMER button to set the power-on timer. Use the UP and DOWN buttons to adjust the duration of the timer (1 to 24 hours). The Timer indicator will turn on and the unit will start after the selected number of hours.
	POWER OFF TIMER With the appliance running with the desired settings, press and hold the TIMER button to set the power-off timer. Use the UP and DOWN buttons to adjust the duration of the timer (1 to 24 hours). The timer indicator will illuminate, and the unit will stop after selected number of hours.

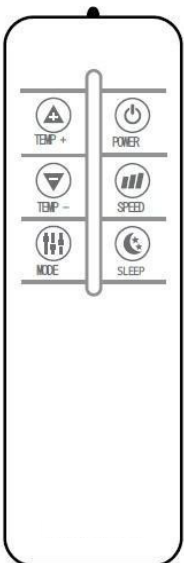REMOTE CONTROL		
	 POWER	Press to turn the unit on or off.
	 TEMP -	Press to decrease the desired temperature or timer duration.
	 TEMP +	Press to increase the desired temperature or timer duration.
	 SPEED	Press to change between the two fan speeds.
	 SLEEP	Press the sleep button to enter sleep mode.
	 MODE	Press to change between Cool, DRY and Fan modes.

NOTE: The design of the remote may vary from the diagram, due to continuous product improvement.

MULTI PROTECTIVE FUNCTIONS

Frost protection

In COOL or DRY modes, if the temperature of the exhaust is too low, the machine will automatically stop operating until the temperature has risen.

Overflow protection

When the water in the internal water tank exceeds the warning level, the machine will stop operating and sound an alarm with the LCD display showing “E4”. To resume operation, empty the internal water tank. After the water is emptied, the machine will automatically return to the original state.

Auto-defrost

The machine has automatic defrosting function. If during operation the temperature of the internal coils drops too low, the unit will enter auto defrost.

Automatic thermal protection

To protect the service life of the machine, the machine has automatic thermal protection. If the temperature within the unit is outside of the specified range, the compressor and the lower motor will stop operation. The appliance will automatically return to normal operation after the temperature of the machine recovers.


Compressor protection

To prevent damage to the compressor there is a 3 minute delay start protection function.

EMPTYING THE INTERNAL WATER TANK

Manual drainage

When the internal water tank is full, the unit will stop working, and the unit will display E4. Turn off the unit and unplug it from the mains. Try not to move the appliance abruptly as this may cause the water in the internal tank to spill out. Place a tray under the water plug or place the unit in a drainage area.

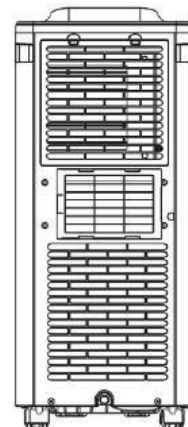


Remove the drainage cap and rubber stopper from the drain port - water will drain from the internal tank. Once the tank is empty, place the rubber stopper and cap back in position.

Continuous drainage

Remove the drainage cap and rubber stopper from the drain port on the base of the unit. Connect a water pipe to the drain port.

You can plumb this pipe into your current plumbing system, lead it outside and use gravity fall or use a water pump.

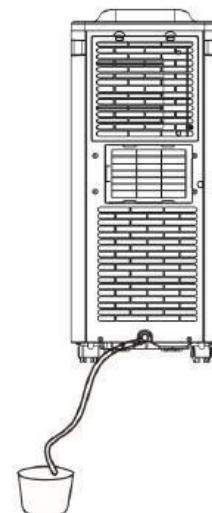

NOTE:

- This model has a self-evaporative function, which reduces the need to empty the water tank. If the unit is vented correctly most of the water is reused to cool the condenser coils and any excess is evaporated.
- Please do not use continuous drainage if you intend to use the self-evaporating facility.

CLEANING AND MAINTENANCE

WARNING: Please turn off the unit and unplug from the mains before cleaning or performing any maintenance!

Clean the surface


Clean the surface of the machine with a wet soft cloth. Do not use chemicals, such as benzene, alcohol, gasoline, etc.; otherwise, as this may cause damage to the surface and or the internal workings of the machine.

Air filter cleaning

If the filter screen is clogged with dust, the effectiveness of the air conditioner is reduced. The filter screen should be cleaned once every two weeks or as often as necessarily in your environment.

Clean the upper filter screen frame

Slide out the filter screen frames from the unit. If there are screws holding the filter in place these should be removed. The evaporator filter screen can be cleaned in warm water with neutral detergent (about 40°C /104°F). It must be rinsed clean and dried in the shade before reinstalling in the unit.

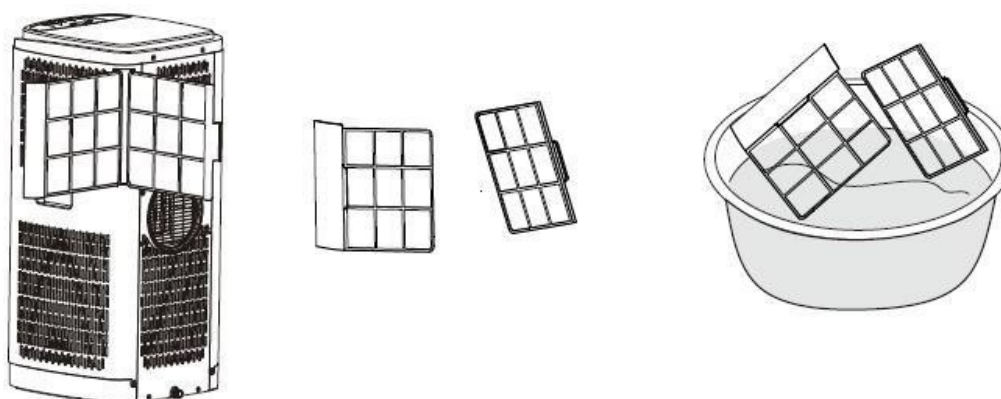

End of season maintenance

- Remove the rubber stopper from the drainage hole and empty the internal tank. You can also drain the water by leaning the unit.
- Then switch the unit to low fan mode.
- Keep the unit in this mode for half day - until the conduit is dried. Doing this helps to keep the inside of the unit dry and prevents mold from developing.
- Turn off the unit and pull out the plug.
- Replace the rubber stopper.
- Coil the wire and bind it together, then put it into the accessories space.
- Separate the air-exhaust pipe and store it safely.
- Cover the unit and keep it in a dry place.

- Take the batteries out of remote control and store or dispose of them safely. Keep all accessories with the unit ready for next season.

TROUBLESHOOTING

Do not repair or disassemble the air conditioner. Unqualified repair will invalidate the warranty and may lead to failure, causing injuries and property damage. Only use it as directed in this user manual and only perform operations advised here.

Problems	Reasons	Solutions
The air conditioner does not work.	There is no electricity.	Turn it on after connecting it to a socket with electricity.
	The display shows "E4".	Discharge the water inside.
	The ambient temperature is too low or too high.	Only use to use the machine within temperature range of 7-35°C (44-95°F).
	In cooling mode, the room temperature is lower than the desired temperature.	Change the desired temperature.
	In dry mode, the ambient temperature is low.	The ambient temperature must be above 16 °C (60 °F).
The cooling effect is not good.	There is direct sunlight.	Use curtains to reduce the direct sun heat.
	Doors or windows are open; there are a lot of people; or in cooling mode, there are other sources of heat (e.g., fridges)	Close doors and windows; increase air conditioner power.
	The filter screen is dirty.	Clean or replace the filter screen.
	The air inlet or outlet is blocked.	Clear obstructions: make sure venting is correct as described in this user manual and hose is not bent.
Loud Noise	The air conditioner is not placed on a flat surface.	Put the air conditioner on a flat and hard place (to reduce noise).
Compressor does not work.	Overheat protection starts.	Wait for 3 minutes until the temperature is lowered, and then restart the machine.

The remote control does not work.	The distance between the machine and the remote control is too far. The remote control is not aligned with the receiver.	Let the remote control get close to the air conditioner, and make sure that the remote control directly faces the receiver.
	Batteries are dead.	Replace batteries.
Others	No refrigerant or there is very little refrigerant.	Refer to Service Centre .
	Anti-freezing protection	Waiting for defrosting. Function will recover automatically. No user input needed.
	High pressure protection.	After inside gas pressure comes down, it will function normally. No user input needed.

If problems not listed in the table occur or recommended solutions do not work, please contact the service centre.

Error codes

Code	Reason	Solution
dH	Unit in dry mode.	Not a fault, no action required.
E2	Room temperature sensor error.	Room temperature is outside the operational range. Do not operate until the room is within the range required .
E4	Water full alarm.	Empty the water tank.
MODE light blinking	Cool / dry mode, the compressor has not started, the mode light will flash. This is normal.	The unit will start operation when the protection period has finished (approx. 3 minutes).

TECHNICAL DATA	
Model	KH-AC-7000
Cooling capacity	7000 BTU
Input Power	780 W
Energy Class	A
Fan	2 fan speeds
Air flow volume	260 m ³ /h
Refrigerant	R290/180g
Sound power level	55 dB(A)
Thermostat	16°C - 32°C
Maximum working pressure of suction/exhaust side	1.0/3.5 MPa
Maximum Allowable Pressure	3.5 Mpa
Power Supply	AC 220–240 V/50 Hz
Net Weight	21 kg
Dimension(L x H x D) product	31 x 70 x 31 cm
Unit must be vented outside when in Air Cooling mode. For the purposes of EU regulation EN12102 this is a local air conditioner and produces less than 65 dB(A) sound energy. 	

WARRANTY

This appliance has been properly tested to the EU standards. During the warranty period, we will proceed to the free removal - for repair or, in our decision, for replacement - of defects in the device or accessories * that may arise from material or manufacturing errors. The provision of warranty services will not extend it, nor will they start a new warranty period! The purchase receipt will consist of proof of this guarantee. Without it, it will not be possible to make any free exchange or repair.

In the event of a warranty, please return the complete appliance together with the purchase receipt to the store where it was purchased.*) In the event of damage to any accessories, a complete replacement of the appliance will not be carried out automatically. Contact our Free Support line in this case. Damage caused by broken glass or plastic parts will have to be paid by the customer. No defects in accessories or wearing parts, or cleaning, maintenance or replacement of wearing parts are included in the warranty, and such costs must be reimbursed. The guarantee will be terminated whenever there has been interference on the equipment.

After the expiration of the warranty period, arrangements may be made by specialized personnel or by our repair services. The costs of repair will no longer be of the responsibility of seller.

DISPOSAL: MEANING OF THE DUSTBIN SYMBOL



Protect our environment: do not dispose of electrical equipment in the domestic waste. Please return any electrical equipment that you will no longer use to the collection points provided for their disposal. This helps avoid the potential effects of incorrect disposal on the environment and human

health. This will contribute to the recycling and other forms of re-utilization of electrical and electronic equipment. Information concerning where the equipment can be disposed of can be obtained from your local authority.

WIFI SMART CONTROL BEFORE YOU START

- Ensure your router provides a standard 2.4ghz connection.
- If your router is dual band ensure that both networks have different network names (SSID) . The provider of your router / Internet service provider will be able to provide advice specific to your router.
- place the air conditioner as close as possible to the router during setup.
- once the app has been installed on your phone, turn off the data connection, and ensure your phone is connected to your router via WIFI .

DOWNLOAD THE APP TO YOUR PHONE

Download the "TUYA SMART" app, from your chosen app store, using the QR Codes below, or by searching for the app in your chosen store.



Android



IOS

CONNECTION METHODS AVAILABLE FOR SETUP

The air conditioner has two different setup modes, EZ (Quick connection) and AP (Access point) . The quick

connection is a quick and simple way to set the unit up. The AP Connection uses a direct local WIFI Connection between your phone and the air conditioner to upload the network details.

Before starting the setup, with the air conditioner plugged in , but turned off, press and hold the **MODE** button for 3 seconds (until you hear a bleep) to enter the WIFI Connection mode.

please ensure your device is in the correct WIFI Connection mode for the connection type you are attempting, the flashing of the WIFI light on your air conditioner will indicate this.


connection Type	Frequency of Flashes
EZ (Quick connection)	Flashes twice per second
AP(Access point)	Flashes once per second

CHANGING BETWEEN CONNECTION TYPES


To change the unit between the two WIFI Connection modes, hold the **MODE button** for 3 seconds.

REGISTER THE APP


1 . press on the sign Up button at the bottom of the screen

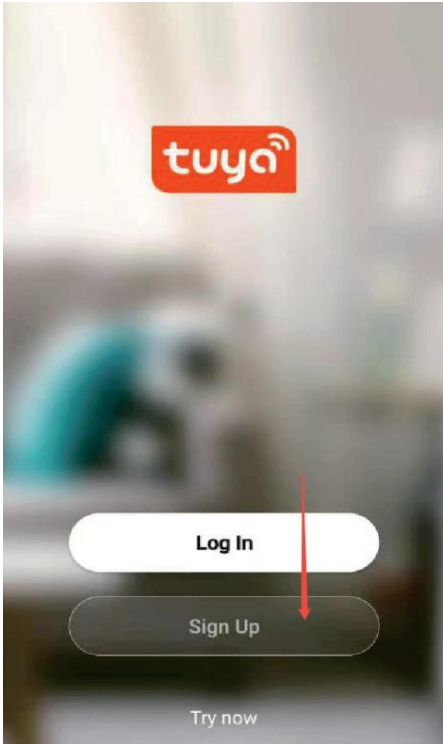


2 . Read the privacy policy and press the Agree Button.

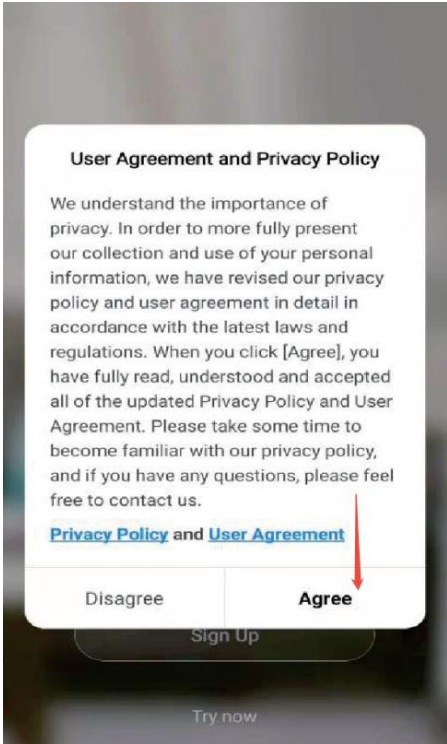


3 . Enter your email address or phone number and press continue to register.

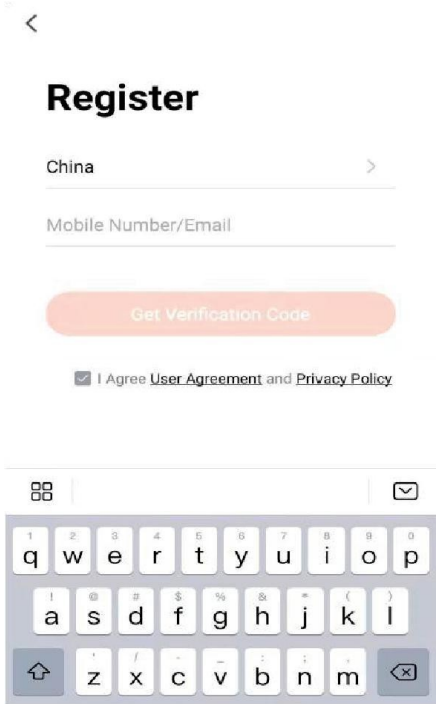


4 . A Verification code will be sent by the method selected in step 3 . Enter the code into the app.

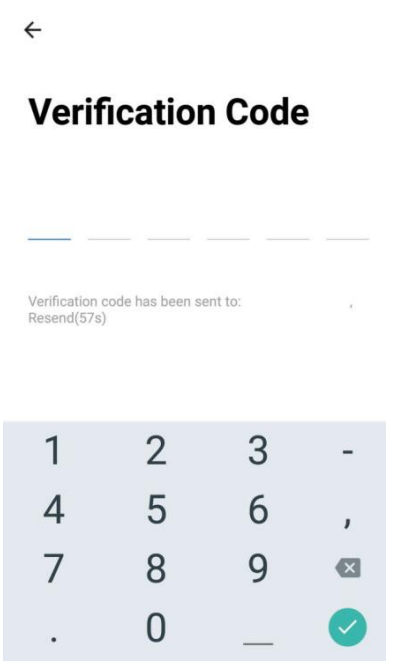

5 . Type in the password you would like to create. This needs to be 6–20 characters, with letters and numbers.

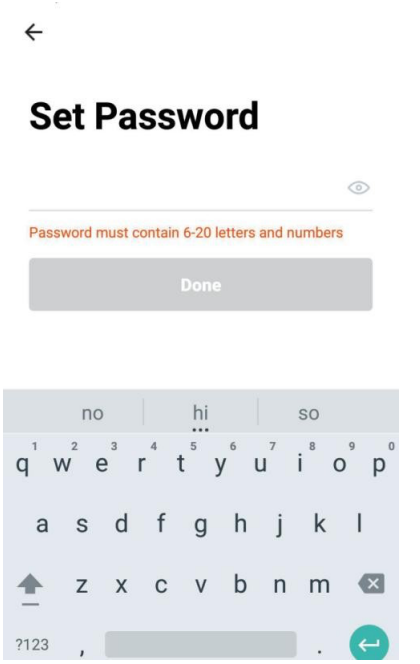


6 . The app is now registered. It will automatically log you in following registration.

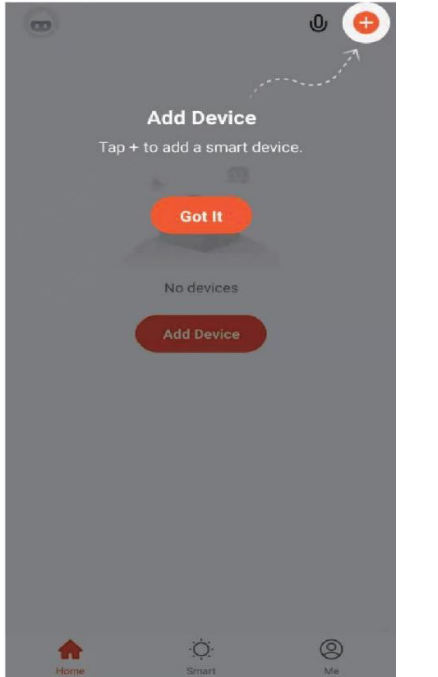


CONNECTING USING EZ (Quick CONNECTION) MODE

Before initiating the connection, make sure the unit is in standby mode, with the WIFI light flashing twice per second. If not follow the instructions for changing the connection mode. Also ensure your phone is connected to the WIFI network. (we advise turning mobile data off during setup)

1. open the app and press "+" to add device

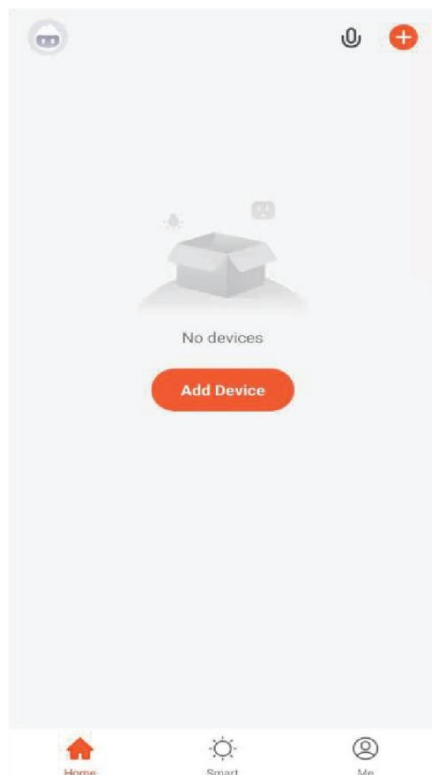


2. select the type of device as "Air conditioner (WIFI)" within the Large Home Appliance tab.

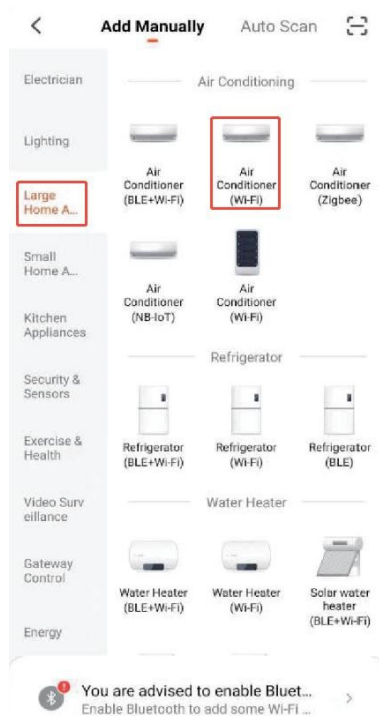


3. select your network, enter

your WIFI Password and press


Next.

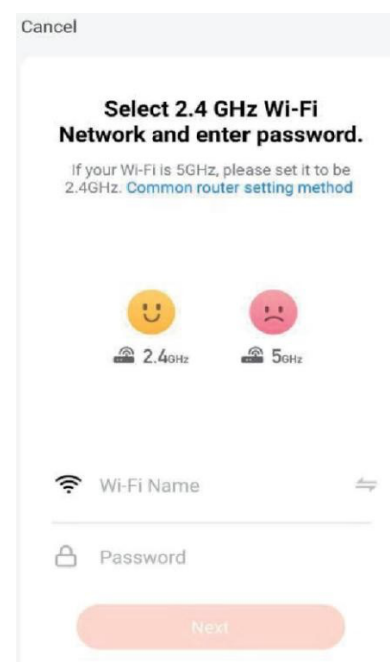

4. Ensure the WIFI light on the air conditioner is flashing twice per second then press on the orange button at the bottom of the screen to confirm



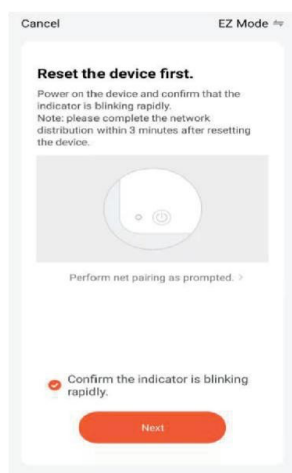


5. This will then transfer the settings to the air conditioner. wait for this to complete. If this fails, retry. If still unsuccessful please review the troubleshooting section for further help.

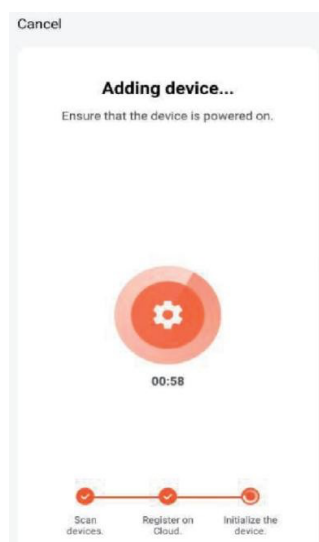

CONNECTING USING AP MODE (ALTERNATIVE METHOD)

Before initiating the connection, make sure the unit is in standby mode, with the WIFI light flashing once per second. If not follow the instructions for changing the WIFI Connection mode. Also ensure your phone is connected to the WIFI network. (we advise turning mobile data off during setup)

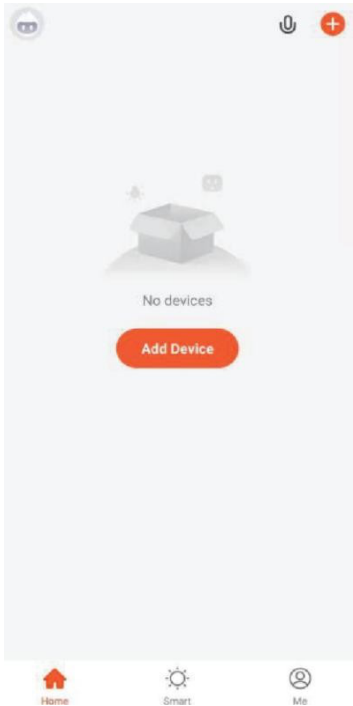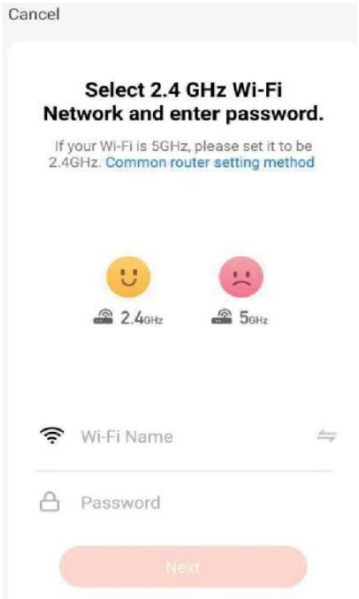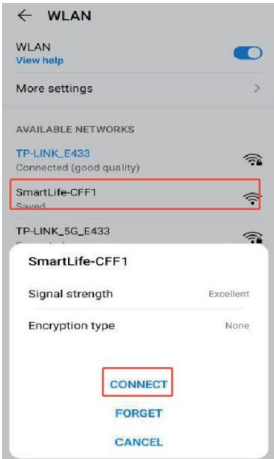
1 . open the app and press "+" to add device 	2 . select the type of device as "Air conditioner (WIFI)" within the Large Home Appliance tab. 	3 . select your network, enter your WIFI Password and press Next. 
4 . Ensure the WIFI light on the air conditioner is slowly flashing (once per three seconds), then select AP Mode in the top right corner before pressing on the orange button at the bottom of the screen to confirm 	5 . Go to network settings in your phone and connect to the "smartLife xxx" connection. Then press on the orange button at the bottom of the screen to confirm 	6 . Go to network settings in your phone and connect to the "smartLife xxx" connection. There is no password to enter. Then return back to the app to completesetup 

This will then transfer the settings to the air conditioner. Once the connection process has completed, go back to the network settings on your phone to ensure your phone has reconnected to your WIFI router.

CONTROLLING YOUR DEVICE THROUGH THE APP

THE HOME SCREEN

Add Device: Add a device to the app, and go through the setup process.

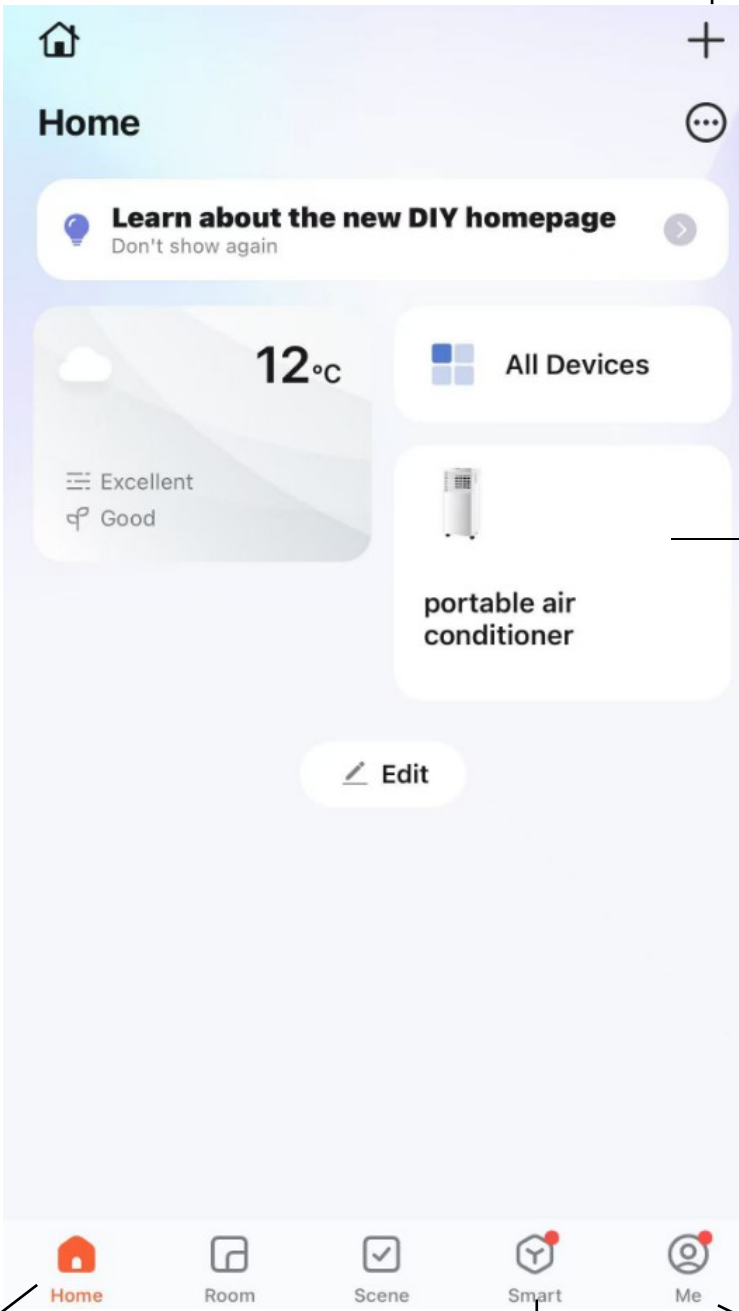

Your Device: press to enter the device screen .

Home: Return to this screen when within the smart or profile tabs.


smart scene: Allows you to program intelligent behaviour based on the internal and external environment

Profile:Provides the option for changing settings, and adding devices using a QR Code provided by a friend

Each device has its own entry on the home screen to allow the user to either quickly turn the unit on or off, or to enter the device screen to make other changes.

DEVICE SCREEN

The device screen is the main control screen for the air conditioner, providing access to the controls to amend the functions and settings

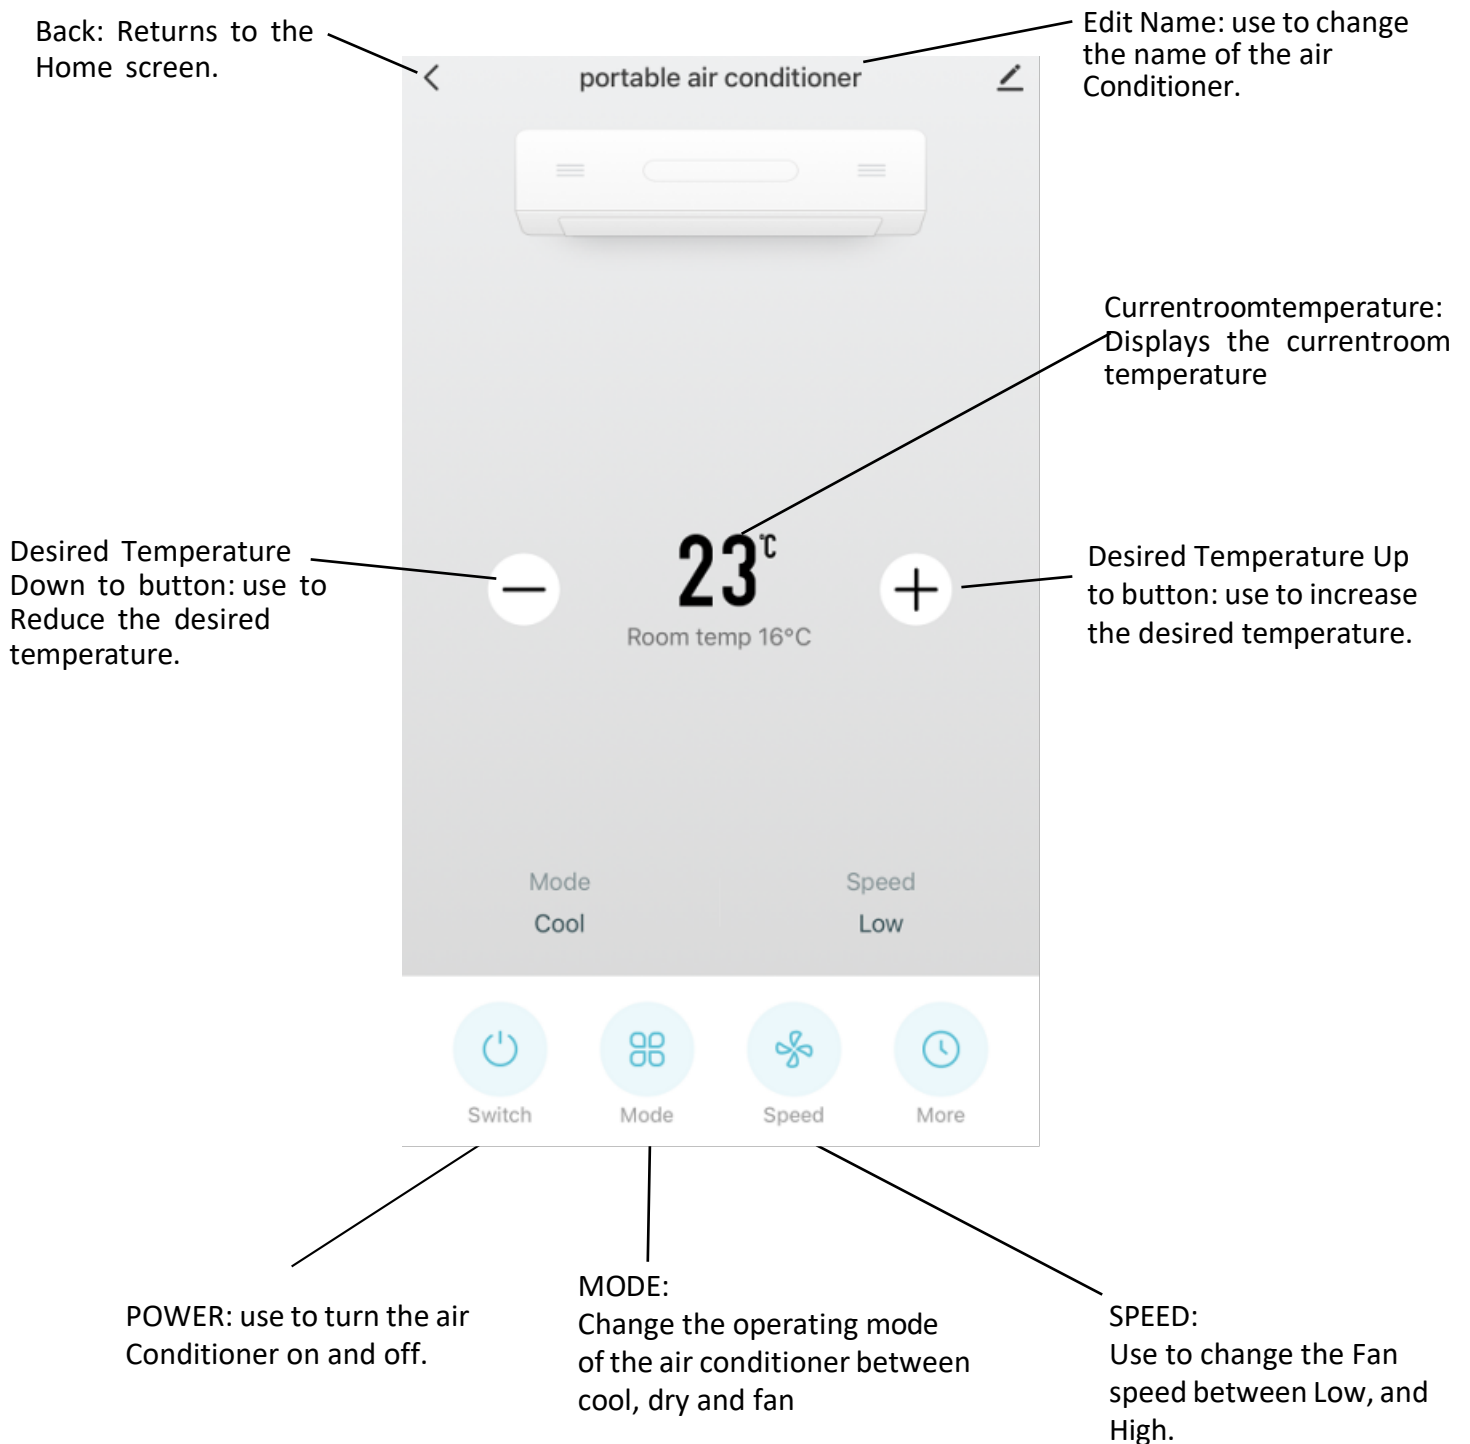

Due to continuous development of the app, the layout and available features maybe subject to change.

CONNECTION TROUBLESHOOTING

1. Check whether the device is powered on and is in the correct WIF Connection mode, if not please refer to the CHANGING BETWEEN CONNECTION MODES Section on page 11 .
2. Ensure the WIFI Password has been entered into the app correctly(case sensitive)
3. Check that the phone is connected to the WIFI You are connecting the device to.
4. Ensure the network you are connecting it to is 2 . 4Ghz (5Ghz WIFI networks are not supported), and that there is a strong WIFI Signal to the item.
5. If your router is dual band, ensure that the 2 . 4ghz network has a different network name (SSID) . Further advice on changing router settings will be available from your Internet service provider / Router manufacturer.
6. check the settings on the router. Encryption should be WPA2 -Psk and authorisation type should be set to AES
7. Try using the alternative connection method. i . e. If connection is failing when attempting to connect through EZ mode, try AP mode.